

## VEGABAR 2x, 3x

Version, available since	Description
1.0.3, 10/2022	<ul style="list-style-type: none"> <li>– Component change due to component availability</li> </ul>
1.0.2, 12/2019	<p><b>New functions:</b></p> <ul style="list-style-type: none"> <li>– Functionality:</li> </ul> <p><b>Error corrections:</b></p> <ul style="list-style-type: none"> <li>– Area under fuse removed</li> </ul>
1.0.1, 10/2019	<p><b>New functions:</b></p> <ul style="list-style-type: none"> <li>– Functionality:</li> </ul> <p><b>Error corrections:</b></p> <ul style="list-style-type: none"> <li>– Layout rework for Ex-requirements</li> </ul>
1.0.0, 05/2019	<p><b>First version</b></p> <p><b>New functions:</b></p> <ul style="list-style-type: none"> <li>– Functionality:</li> <li>– 2-wire 4 ... 20 mA</li> </ul>

### Legend:

Name	Description
Version	<p>xx.yy.zz</p> <p>xx: Compatibility version. Will be increased when the compatibility to the previous version is no longer given. Value range 0 ... 99.</p> <p>yy: Function extension version. Will be increased when new functions or function changes were carried out on the previous version. Also errors can have been corrected with a function change. Value range 0 ... 99.</p> <p>zz: Error correction version. Will be increased when only errors were corrected on the previous version. Value range 0 ... 99.</p>
available since	Month/Year