

Operating Instructions

Overvoltage protection

B 61-300 FI

For supply and signal cables with leakage circuit breaker



Document ID: 40489



VEGA

Contents

- 1 About this document 3**
 - 1.1 Function 3
 - 1.2 Target group 3
 - 1.3 Symbols used..... 3
- 2 For your safety 4**
 - 2.1 Authorised personnel 4
 - 2.2 Appropriate use..... 4
 - 2.3 Warning about incorrect use..... 4
 - 2.4 General safety instructions 4
 - 2.5 Safety label on the instrument 4
 - 2.6 EU conformity..... 5
 - 2.7 Installation and operation in the USA and Canada 5
 - 2.8 Safety instructions for Ex areas 5
 - 2.9 Environmental instructions 5
- 3 Product description 6**
 - 3.1 Configuration..... 6
 - 3.2 Principle of operation..... 6
 - 3.3 Packaging, transport and storage..... 7
- 4 Mounting instructions 8**
 - 4.1 Installation in switching cabinet 8
 - 4.2 Mounting in housing 9
- 5 Connecting to power supply..... 11**
 - 5.1 Preparing the connection 11
 - 5.2 Connection steps for version with housing 11
 - 5.3 Wiring plan 12
- 6 Maintenance and fault rectification..... 13**
 - 6.1 Maintenance 13
 - 6.2 Rectify faults..... 13
 - 6.3 How to proceed if a repair is necessary..... 13
- 7 Dismount..... 14**
 - 7.1 Dismounting steps..... 14
 - 7.2 Disposal 14
- 8 Supplement 15**
 - 8.1 Technical data 15
 - 8.2 Dimensions B61-300 FI..... 16

Safety instructions for Ex areas:



Take note of the Ex specific safety instructions for Ex applications. These instructions are attached as documents to each instrument with Ex approval and are part of the operating instructions.

Editing status: 2022-05-10

1 About this document

1.1 Function

This operating instructions provides all the information you need for mounting, connection and setup as well as important instructions for maintenance, fault rectification, the exchange of parts and the safety of the user. Please read this information before putting the instrument into operation and keep this manual accessible in the immediate vicinity of the device.

1.2 Target group

This operating instructions manual is directed to trained personnel. The contents of this manual must be made available to the qualified personnel and implemented.

1.3 Symbols used



Document ID

This symbol on the front page of this instruction refers to the Document ID. By entering the Document ID on www.vega.com you will reach the document download.



Information, tip, note

This symbol indicates helpful additional information.



Caution: If this warning is ignored, faults or malfunctions can result.
Warning: If this warning is ignored, injury to persons and/or serious damage to the instrument can result.



Danger: If this warning is ignored, serious injury to persons and/or destruction of the instrument can result.



Ex applications

This symbol indicates special instructions for Ex applications.



SIL applications

This symbol indicates instructions for functional safety which must be taken into account particularly for safety-relevant applications.



List

The dot set in front indicates a list with no implied sequence.



Action

This arrow indicates a single action.



Sequence of actions

Numbers set in front indicate successive steps in a procedure.



Disposal

This symbol indicates special instructions for disposal.

2 For your safety

2.1 Authorised personnel

All operations described in this documentation must be carried out only by trained, qualified personnel authorised by the plant operator. During work on and with the device, the required personal protective equipment must always be worn.

2.2 Appropriate use

The B61-300 FI is an overvoltage arrester for sensors and signal conditioning instruments with mains power supply connected via a fault-current circuit breaker (FI).

You can find detailed information about the area of application in chapter "*Product description*".

2.3 Warning about incorrect use

Inappropriate or incorrect use of this product can give rise to application-specific hazards, e.g. vessel overflow through incorrect mounting or adjustment. Damage to property and persons or environmental contamination can result. Also, the protective characteristics of the instrument can be impaired.

2.4 General safety instructions

This is a state-of-the-art instrument complying with all prevailing regulations and directives. The instrument must only be operated in a technically flawless and reliable condition. The operator is responsible for the trouble-free operation of the instrument. When measuring aggressive or corrosive media that can cause a dangerous situation if the instrument malfunctions, the operator has to implement suitable measures to make sure the instrument is functioning properly.

The safety instructions in this operating instructions manual, the national installation standards as well as the valid safety regulations and accident prevention rules must be observed by the user.

For safety and warranty reasons, any invasive work on the device beyond that described in the operating instructions manual may be carried out only by personnel authorised by the manufacturer. Arbitrary conversions or modifications are explicitly forbidden. For safety reasons, only the accessory specified by the manufacturer must be used.

To avoid any danger, the safety approval markings and safety tips on the device must also be observed.

2.5 Safety label on the instrument

The safety approval markings and safety tips on the device must be observed.

2.6 EU conformity

The device fulfils the legal requirements of the applicable EU directives. By affixing the CE marking, we confirm successful testing of the product.

You can find the CE Certificate of Conformity in the download section under "www.vega.com".

2.7 Installation and operation in the USA and Canada

This information is only valid for USA and Canada. Hence the following text is only available in the English language.

Installations in the US shall comply with the relevant requirements of the National Electrical Code (ANSI/NFPA 70).

Installations in Canada shall comply with the relevant requirements of the Canadian Electrical Code.

2.8 Safety instructions for Ex areas

For applications in explosion-proof areas (Ex), only devices with corresponding Ex approval may be used. Observe the Ex-specific safety instructions. These are an integral part of the operating instructions and are enclosed with every device with Ex approval.

2.9 Environmental instructions

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified according to DIN EN ISO 14001.

Please help us fulfil this obligation by observing the environmental instructions in this manual:

- Chapter "*Packaging, transport and storage*"
- Chapter "*Disposal*"

3 Product description

3.1 Configuration

Scope of delivery

The scope of delivery encompasses:

- Overvoltage arrester B61-300 FI (optionally integrated in housing with PE terminal)
- PE terminal for carrier rail
 - This operating instructions manual

Constituent parts

The following illustration shows the configuration of the overvoltage arrester B61-300 FI:

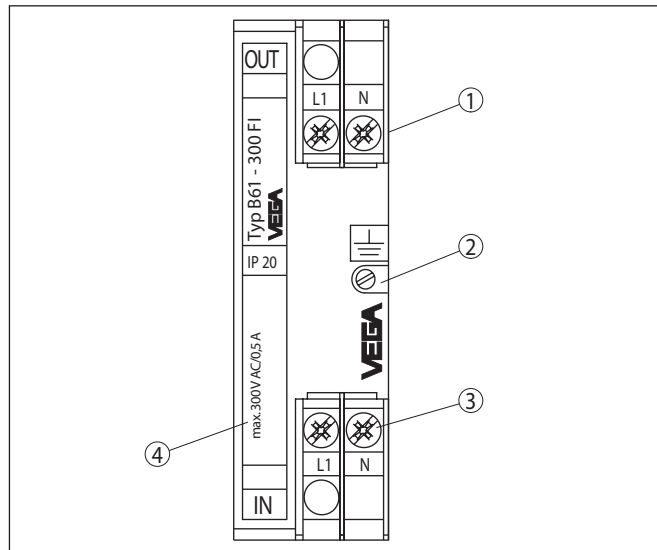


Fig. 1: Configuration of B61-300 FI

- 1 Terminals Out (protected side)
- 2 Screw for carrier rail fastening
- 3 Terminals In (unprotected side)
- 4 Type label

3.2 Principle of operation

Application area

Voltage surges can be caused by indirect atmospheric discharges (lightning strokes) or switching operations in the supply network. Further causes can be inductive or capacitive couplings from other electrical systems. Voltage peaks (transients) must be expected especially when long power supply and signal cables are used.

Such voltage surges can cause damage to sensors and controllers.

The VEGA overvoltage arrester reduces voltage surges on the supply or signal cables to a safe level. They are designed for mounting on carrier rail according to EN 50 022/EN 50 035 in the switching cabinet or in a metal or plastic housing close to the sensor.

Functional principle	<p>Varistors (voltage-dependent resistors) as well as overvoltage arresters (gas arresters) are used as protective elements for voltage limitation.</p> <p>As soon as the voltage reaches the response voltage of the protective element increases, it becomes conductive and dissipates the energy by briefly bridging the supply cables. When the voltage surge subsides, the protective element returns to high-impedance status and has no further influence on the supply circuit.</p> <p>Due to this protective concept of B61-300 FI without energy dissipation to ground, a connected fault-current circuit breaker is not triggered.</p>
Packaging	<p>3.3 Packaging, transport and storage</p> <p>Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test based on ISO 4180.</p> <p>The packaging of standard instruments consists of environment-friendly, recyclable cardboard. For special versions, PE foam or PE foil is also used. Dispose of the packaging material via specialised recycling companies.</p>
Transport	<p>Transport must be carried out in due consideration of the notes on the transport packaging. Nonobservance of these instructions can cause damage to the device.</p>
Transport inspection	<p>The delivery must be checked for completeness and possible transit damage immediately at receipt. Ascertained transit damage or concealed defects must be appropriately dealt with.</p>
Storage	<p>Up to the time of installation, the packages must be left closed and stored according to the orientation and storage markings on the outside.</p> <p>Unless otherwise indicated, the packages must be stored only under the following conditions:</p> <ul style="list-style-type: none"> ● Not in the open ● Dry and dust free ● Not exposed to corrosive media ● Protected against solar radiation ● Avoiding mechanical shock and vibration
Storage and transport temperature	<ul style="list-style-type: none"> ● Storage and transport temperature see chapter " <i>Supplement - Technical data - Ambient conditions</i>" ● Relative moisture 20 ... 85 %
Lifting and carrying	<p>With instrument weights of more than 18 kg (39.68 lbs) suitable and approved equipment must be used for lifting and carrying.</p>

4 Mounting instructions

4.1 Installation in switching cabinet

The overvoltage arrester is mounted in the switching cabinet on carrier rails according to EN 50 022 (DIN rail) or EN 50 035 (C-rail). It is fastened to the carrier rail with a screw located on its exterior. The screw is marked with the symbol for functional ground. Depending on the version, it may be galvanically connected to the ground terminal of the overvoltage arrester (see circuit diagram in chapter "Wiring plan").

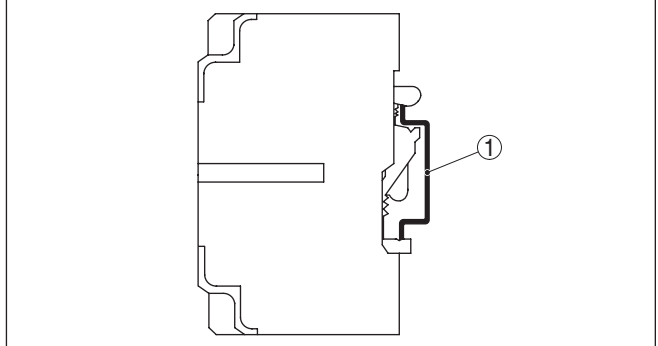


Fig. 2: Mounting on carrier rail according to EN 50 022 (DIN rail) 35 x 7.5 mm

1 Carrier rail

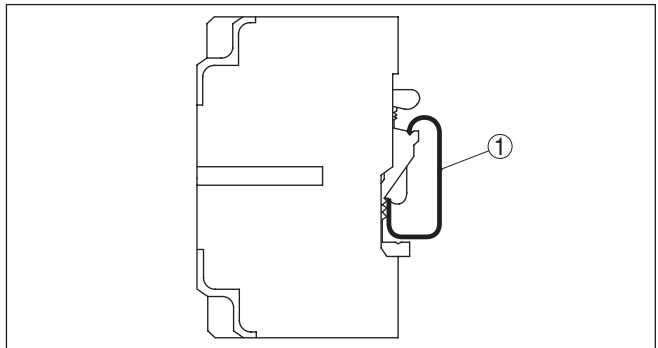


Fig. 3: Mounting on carrier rail according to EN 50 035 (C-rail) 35 x 7.5 mm

1 Carrier rail

Installation procedure

Proceed as follows:

1. Loosen fixing screw

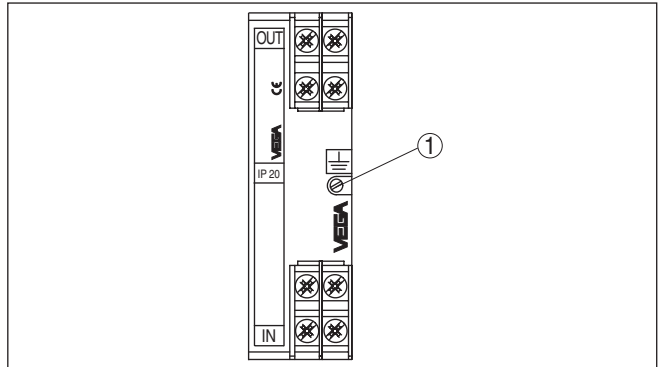


Fig. 4: Mounting on carrier rail

1 Fixing screw

2. Place the overvoltage arrester onto the rail and let it snap in
3. Tighten fixing screw

4.2 Mounting in housing

The overvoltage arrester is optionally available in a plastic or aluminium housing. Make sure when mounting that the cable glands point downward. Thus avoids water ingress.

The carrier rail inside the housing is galvanically connected to the ground terminal outside on the housing. This ground terminal can be connected with the potential equalization line (PA). For the function of the overvoltage arrester, however, this is not necessary.

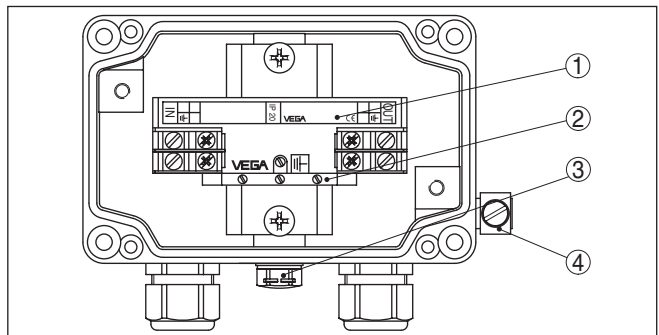


Fig. 5: Mounting in Aluminium housing

- 1 Overvoltage protection
- 2 PE terminal
- 3 Pressure compensation
- 4 Ground terminal

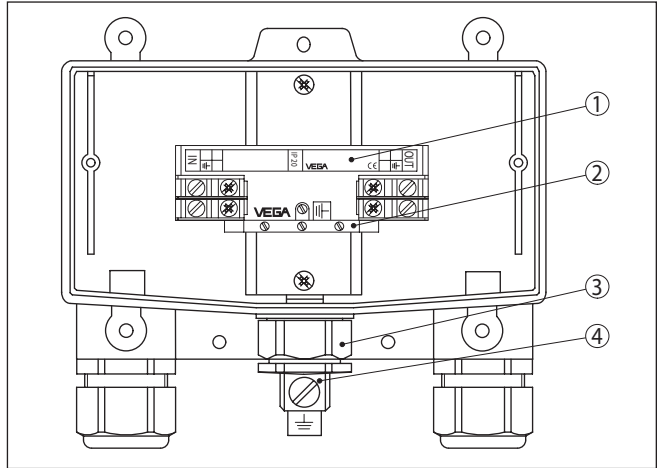


Fig. 6: Mounting in plastic housing

- 1 Overvoltage protection
- 2 PE terminal
- 3 Pressure compensation
- 4 Ground terminal

5 Connecting to power supply

5.1 Preparing the connection

Note safety instructions

Always keep in mind the following safety instructions:

- Connect only in the complete absence of line voltage

Before starting setup make sure that the power supply corresponds to the specifications on the type label.

For effective overvoltage protection, the cables between overvoltage arrester and instrument should be as short as possible.



Danger:

Apart from the overvoltage arrester, a separate PE terminal is mounted on the carrier rail in the aluminium and plastic housing. It is galvanically connected with the carrier rail.

On the aluminium housing, the ground conductor (PE) of the power supply cable must be led to this PE terminal to reach protection ground for the metal housing.



Note:

Install a disconnecting device for the instrument which is easy to access. The disconnecting device must be marked for the instrument (IEC/EN 61010).

5.2 Connection steps for version with housing

Proceed as follows:

1. Loosen screws of the housing cover
2. Push the supply and connection cables through the cable gland into the housing, strip approx. 1 cm (0.4 in) insulation from the ends of the wires
3. Connect the wire ends L and N according to chapter "*Wiring plan*" to the terminals of the overvoltage arrester
4. Wire ends for PE to the green/yellow PE terminal in the housing
5. Check all cable connections, especially the PE connections, to make sure they are tightened sufficiently
6. Tighten the compression nuts of the cable entry glands. The seal ring must completely encircle the cable
7. Tighten screws of the housing cover

The electrical connection is finished.

5.3 Wiring plan

Circuit diagram

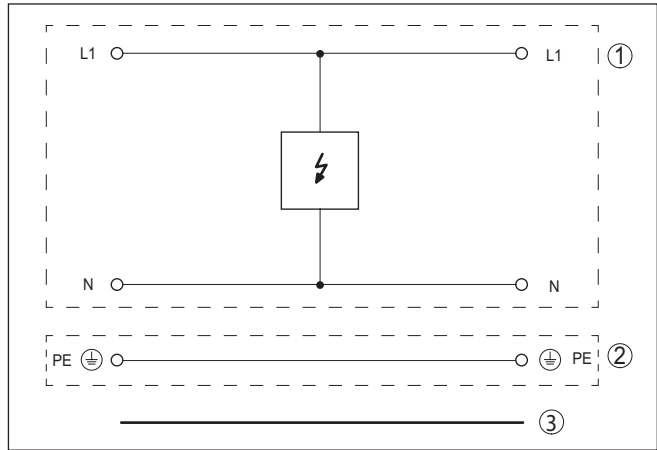


Fig. 7: Circuit diagram overvoltage arrester B61-300 FI

- 1 Overvoltage protection
- 2 PE terminal
- 3 Potential equalization, plant-side

Wiring plan

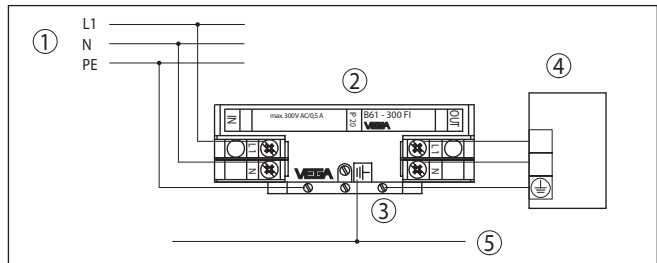


Fig. 8: Wiring plan overvoltage arrester B61-300 FI in the housing

- 1 Mains supply through fault-current circuit breaker (FI)
- 2 Overvoltage protection
- 3 PE terminal
- 4 Protected instrument
- 5 Carrier rail

6 Maintenance and fault rectification

6.1 Maintenance

If the device is used properly, no special maintenance is required in normal operation.

6.2 Rectify faults

Reaction when malfunction occurs

The operator of the system is responsible for taking suitable measures to rectify faults.

Fault rectification

The first measure to be taken is to check the input/output signal as well as the power supply. In many cases, the causes can be determined and faults can be quickly rectified.

On-site repair of B61-300 FI is not possible.

24 hour service hotline

Should these measures not be successful, please call in urgent cases the VEGA service hotline under the phone no. **+49 1805 858550**.

The hotline is manned 7 days a week round-the-clock. Since we offer this service worldwide, the support is only available in the English language. The service is free, only standard call charges are incurred.

Reaction after fault rectification

Depending on the reason for the fault and the measures taken, the steps described in chapter "Setup" must be carried out again or must be checked for plausibility and completeness.

6.3 How to proceed if a repair is necessary

You can find an instrument return form as well as detailed information about the procedure in the download area of our homepage. By doing this you help us carry out the repair quickly and without having to call back for needed information.

In case of repair, proceed as follows:

- Print and fill out one form per instrument
- Clean the instrument and pack it damage-proof
- Attach the completed form and, if need be, also a safety data sheet outside on the packaging
- Ask the agency serving you to get the address for the return shipment. You can find the agency on our homepage.

7 Dismount

7.1 Dismounting steps

Take note of chapters "*Mounting*" and "*Connecting to voltage supply*" and carry out the listed steps in reverse order.

7.2 Disposal



Pass the instrument on to a specialised recycling company and do not use the municipal collecting points.

Remove any batteries in advance, if they can be removed from the device, and dispose of them separately.

If personal data is stored on the old device to be disposed of, delete it before disposal.

If you have no way to dispose of the old instrument properly, please contact us concerning return and disposal.

8 Supplement

8.1 Technical data

Note for approved instruments

The technical data in the respective safety instructions are valid for approved instruments (e.g. with Ex approval). These data can differ from the data listed herein, for example regarding the process conditions or the voltage supply.

General data

Version	Device for carrier rail mounting
Housing material	Plastic (PPE)
Weight approx.	175 g (0.385 lbs)

Electrical characteristics ¹⁾

Operating voltage	100 ... 300 V AC/DC through fault-current circuit breaker
Max. perm. current	0.5 A
Internal resistance	< 0.01 Ω
Response voltage	500 V
Response time	< 10 ⁻⁶ s
Discharge current	< 10 kA (8/20 μ s)

Electromechanical data

Screw terminals for cable cross-section	< 2.5 mm ² (AWG 14)
---	--------------------------------

Ambient conditions

Ambient temperature	-40 ... +60 °C (-40 ... +140 °F)
Storage and transport temperature	-40 ... +70 °C (-40 ... +158 °F)

Electrical protective measures

Protection rating	
– unassembled	IP 20
– In Aluminium or plastic housing	IP 65
– IK code according to IEC 62262	IK 06

¹⁾ Reference temperature +25 °C (+77 °F).

8.2 Dimensions B61-300 FI

Overvoltage protection

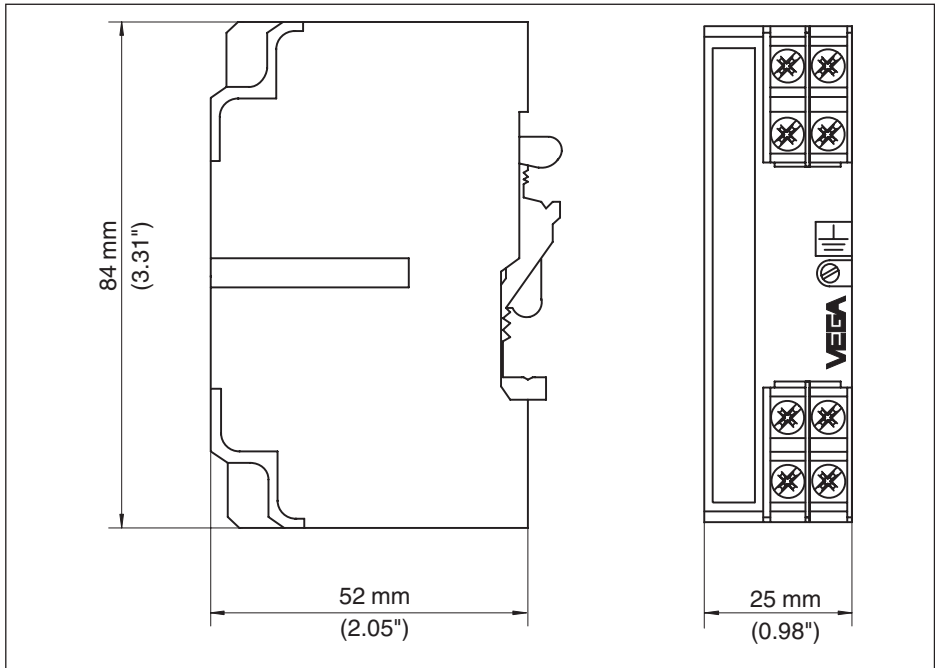


Fig. 9: Dimensions B61-300 FI

Housing



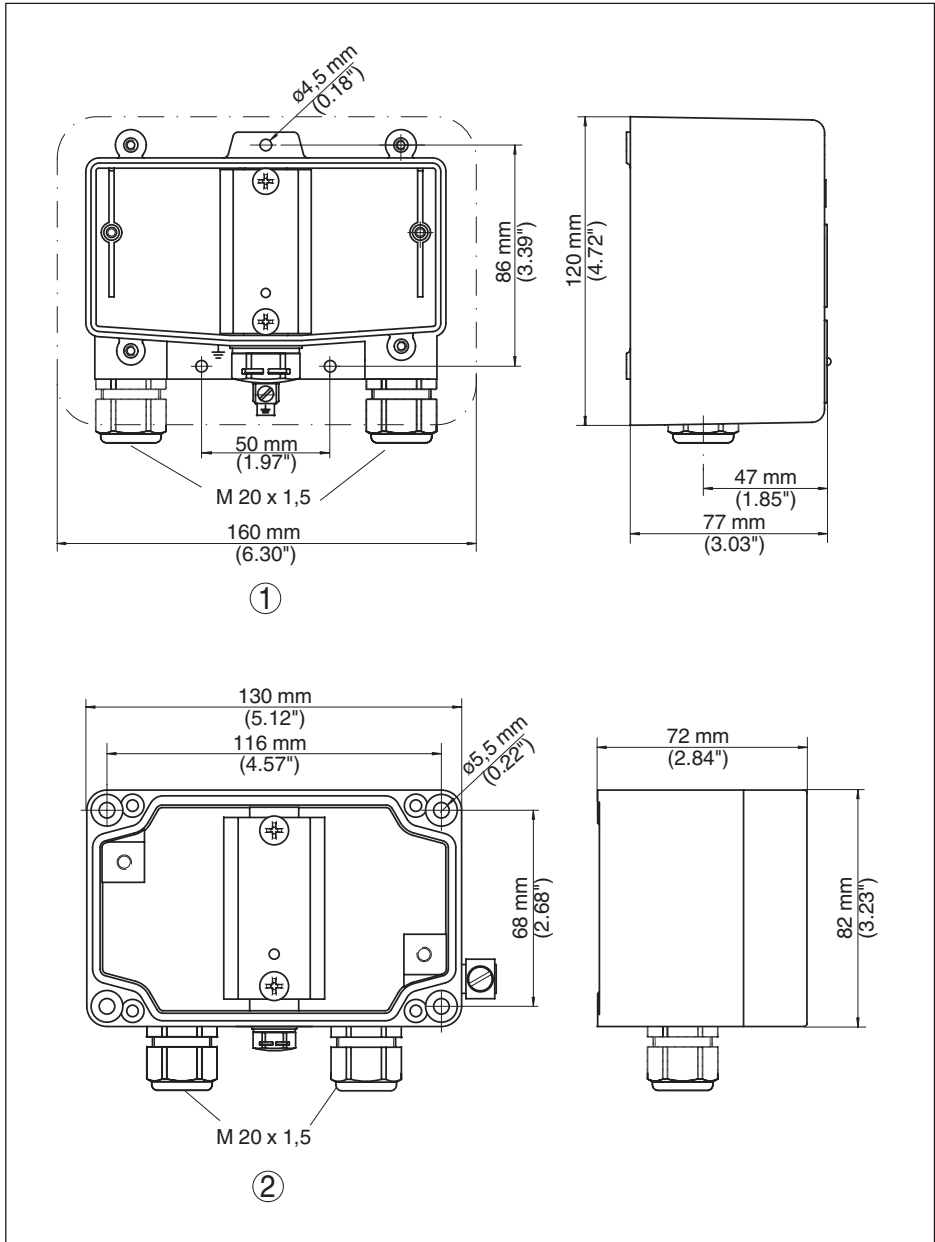


Fig. 10: Dimensions B61-300 FI

- 1 Plastic housing
- 2 Aluminium housing

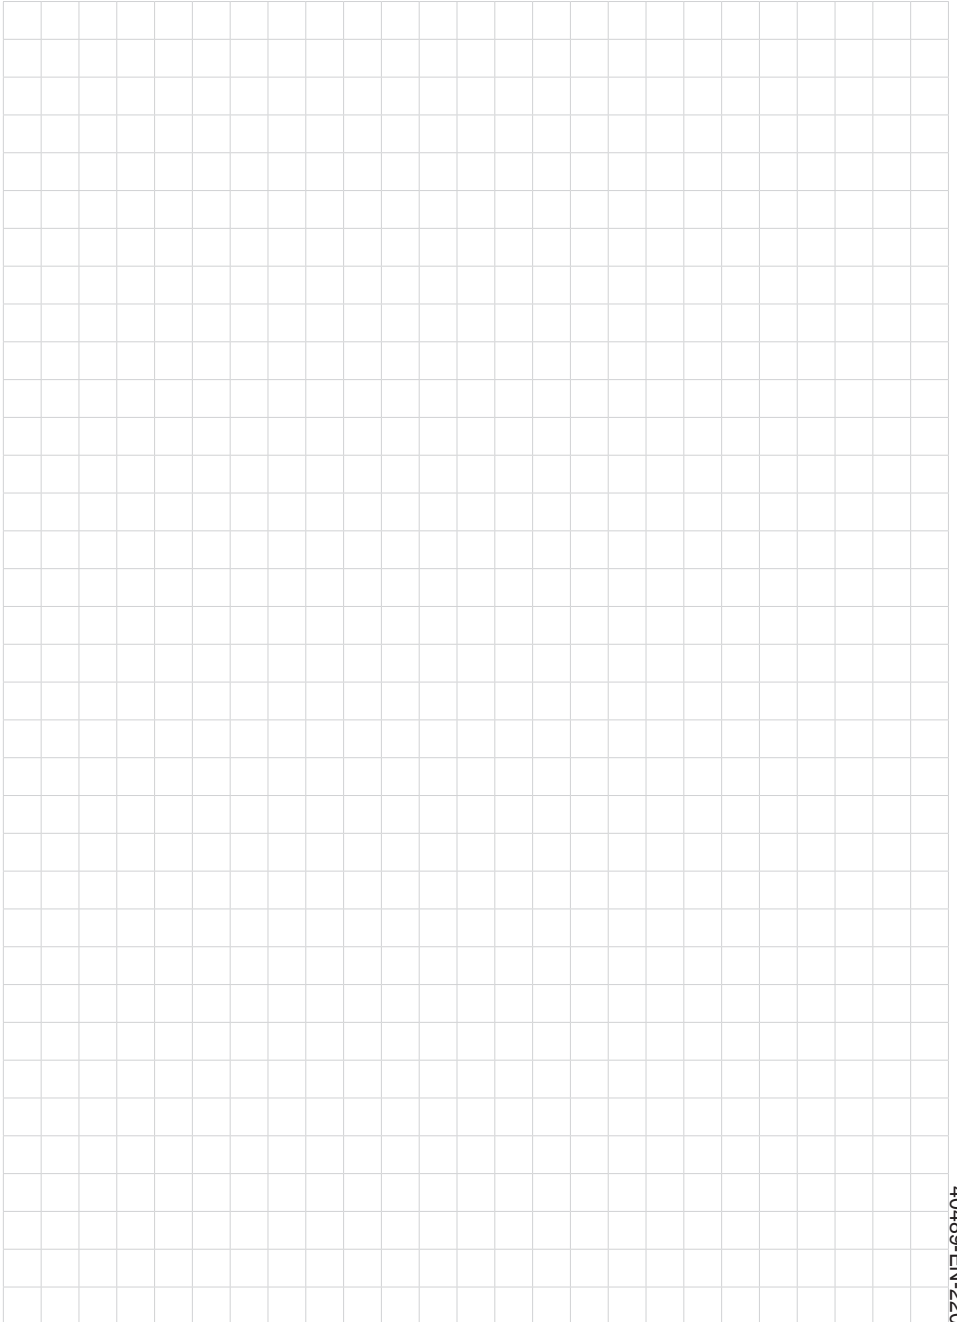

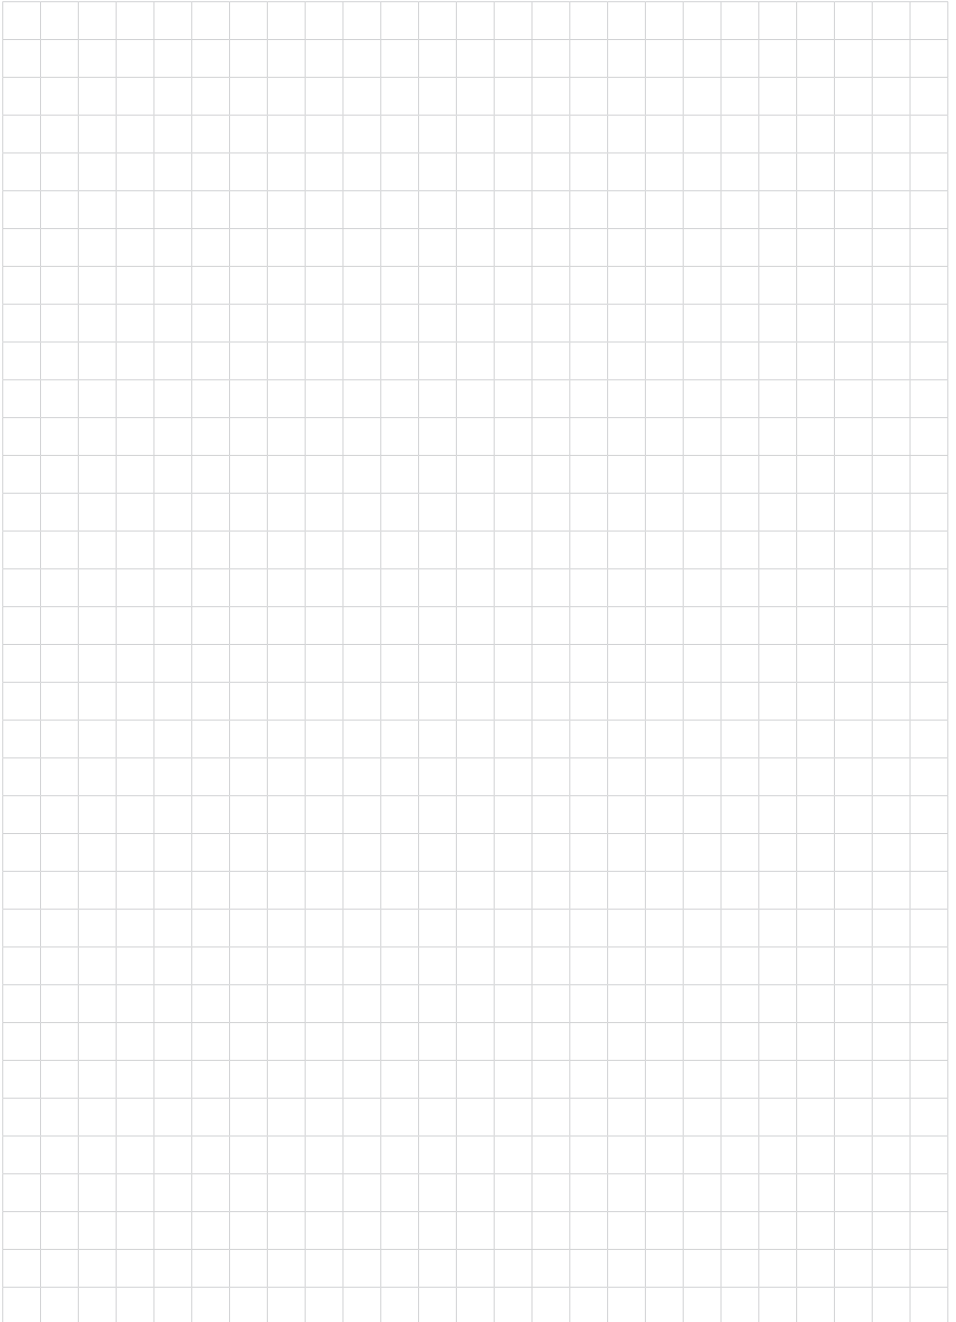

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2022



40489-EN-220516

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com