Safety Manual

VEGAVIB series 60

Contactless electronic switch





Document ID: 32002







Contents

1	Fund	tional safety	. 3
		General information	
	1.2	Planning	4
		Adjustment instructions	
	1.4	Setup	. 6
	1.5	Reaction during operation and in case of failure	. 6
	1.6	Recurring function test	. 7
	1.7	Safety-related characteristics	. 7
2	Sup	plement	10



Scope

1 Functional safety

1.1 General information

This safety manual applies to measuring systems consisting of the vibrating level switch VEGAVIB series 60 with integrated electronics module VB60C:

VEGAVIB 61, 62, 63

Valid hardware and software versions:

- Serial number of the electronics > 14215928
- Sensor software from Rev. 1.03

Application area The measuring system can be implemented for level detection of bulk solids (powders and granulates) which meets the special requirements of safety technology.

Due to the systematic capability SC3 this is possible up to:

- SIL2 in single-channel architecture
- SIL3 in multiple channel architecture

Note:

With a special factory setting, the measuring system is also suitable for detection of solids in water (see "Operating instructions manual").

SIL conformity

The SIL conformity is confirmed by the verification documents in the appendix.

Abbreviations, terms

SIL	Safety Integrity Level
HFT	Hardware Fault Tolerance
SFF	Safe Failure Fraction
PFD	Average Probability of dangerous Failure on Demand
PFH	Probability of a dangerous Failure per Hour
FMEDA	Failure Mode, Effects and Diagnostics Analysis
λ_{sd}	Rate for safe detected failure
$\lambda_{_{SU}}$	Rate for safe undetected failure
λ_{dd}	Rate for dangerous detected failure
λ_{du}	Rate for dangerous undetected failure
DCs	Diagnostic Coverage of safe failures; $\text{DC}_{_S}$ = $\lambda_{_{Sd}}\!/(\lambda_{_{Sd}}\!+\!\lambda_{_{Su}})$
DC	Diagnostic Coverage of dangerous failures; $DC_{D} = \lambda_{dd}^{-} (\lambda_{dd} + \lambda_{du})$
FIT	Failure In Time (1 FIT = 1 failure/10 ⁹ h)
MTBF	Mean Time Between Failure
MTTF	Mean Time To Failure
MTTR	Mean Time To Repair

Further abbreviations and terms are stated in IEC 61508-4.

Relevant standards

32002-EN-181129

• IEC 61508 (also available as DIN EN)



 Functional safety of electrical/electronic/programmable electronic safety-related systems

Safety requirements

Failure limit values for a safety function, depending on the SIL class (of IEC 61508-1, 7.6.2)

Safety integrity level	Low demand mode	High demand mode
SIL	PFD _{avg}	PFH
4	≥ 10 ⁻⁵ < 10 ⁻⁴	≥ 10 ^{.9} < 10 ^{.8}
3	≥ 10 ⁻⁴ < 10 ⁻³	≥ 10 ⁻⁸ < 10 ⁻⁷
2	≥ 10 ^{.3} < 10 ^{.2}	≥ 10 ⁻⁷ < 10 ⁻⁶
1	≥ 10 ⁻² < 10 ⁻¹	≥ 10 ⁻⁶ < 10 ⁻⁵

Safety integrity of hardware for safety-related subsystems of type B (IEC 61508-2, 7.4.3)

Safe failure fraction	Hardware fault tolerance		
SFF	HFT = 0	HFT = 1	HFT = 2
< 60 %	not permit- ted	SIL1	SIL2
60 % < 90 %	SIL1	SIL2	SIL3
90 % < 99 %	SIL2	SIL3	(SIL4)
≥ 99 %	SIL3	(SIL4)	(SIL4)

1.2 Planning

The safety function of this measuring system is the identification and signalling of the condition of the vibrating element.

A difference is made between the two conditions "covered" and "uncovered".

Safe state

Safety function

The safe state depends on the mode:

	Overflow protection (max. operation)	Dry run protection (min. operation)
Vibrating element in safe state	covered	uncovered
Output circuit in safe state	currentless	currentless

The safe state of the measuring system is the switched-off status (idle current principle):

- C electronics: contactless electronic switch open
- R electronics: relay output deenergised
- T electronics: transistor output non-conductive

Fault description

A safe failure exists when the measuring system switches to the defined safe state or the fault mode without the process demanding it.



If the internal diagnostic system detects a failure, the measuring system goes into fault mode. A dangerous undetected failure exists if the measuring system switches neither to the defined safe state nor to the failure mode when the process requires it.
The processing unit must evaluate the output circuit of the measuring system under the conditions of the quiescent current principle.
The processing unit must correspond to the SIL level of the measure- ment chain.
If the demand rate is only once a year, then the measuring system can be used as safety-relevant subsystem in " <i>low demand mode</i> " (IEC 61508-4, 3.5.12).
If the ratio of the internal diagnostics test rate of the measuring sys- tem to the demand rate exceeds the value 100, the measuring system can be treated as if it is executing a safety function in the mode with low demand rate (IEC 61508-2, 7.4.3.2.5).
An associated characteristic is the value PFD_{avg} (average Probability of dangerous Failure on Demand). It is dependent on the test interval T_{Proof} between the function tests of the protective function.
Number values see chapter "Safety-related characteristics".
If the " <i>low demand rate</i> " does not apply, the measuring system should be used as a safety-relevant subsystem in the mode " <i>high demand mode</i> " (IEC 61508-4, 3.5.12).
The fault tolerance time of the complete system must be higher than the sum of the reaction times or the diagnostics test periods of all components in the safety-related measurement chain.
An associated characteristic is the value PFH (failure rate).
Number values see chapter "Safety-related characteristics".
The following assumptions form the basis for the implementation of FMEDA:
 Failure rates are constant, wear of the mechanical parts is not taken into account Failure rates of external power cumplice are not taken into account
 Failure rates of external power supplies are not taken into account Multiple errors are not taken into account The average ambient temperature during the operating time is
 40 °C (104 °F) The environmental conditions correspond to an average industrial environment
• The lifetime of the components is around 8 to 12 years
(IEC 61508-2, 7.4.7.4, remark 3)The repair time (exchange of the measuring system) after an non-
dangerous malfunction is eight hours (MTTR = 8 h)
• The processing unit evaluates the output circuit of the measuring system according to the idle current principle.
• The scanning interval of a connected control and processing unit is max. 1 hour, in order to react to dangerous, detectable errors



 Existing communication interfaces (e. g. HART, I²C-Bus) are not used for transmission of safety-relevant information

General instructions and	The measuring system should be used appropriately taking pressure,
restrictions	temperature, density and chemical properties of the medium into
	account.

The user-specific limits must be complied with. The specifications of the operating instructions manual must not be exceeded.

Keep in mind when using as dry run protection:

- Avoid buildup on the vibrating system (probably shorter proof test intervals will be necessary)
- Fork version: avoid granulate size of the medium > 15 mm (0.6 in)

1.3 Adjustment instructions

Adjustment elements

Since the plant conditions influence the safety of the measuring system, the adjustment elements must be set according to the application:

- Potentiometer for switching point adaptation
- DIL switch for mode adjustment

The function of the adjustment elements is described in the operating instructions manual.

1.4 Setup

Mounting and installation Take note of the mounting and installation instructions in the operating instructions manual.

In the setup procedure, a check of the safety function by means of an initial filling is recommended.

1.5 Reaction during operation and in case of failure

Operation and interferenceThe adjustment elements or device parameters must not be modified
during operation.

If modifications have to be made during operation, carefully observe the safety functions.

Fault signals that may appear are described in the appropriate operating instructions manual.

If faults or error messages are detected, the entire measuring system must be shut down and the process held in a safe state by other measures.

The exchange of the electronics is simple and described in the operating instructions manual. Note the instructions for parameter adjustment and setup.

If due to a detected failure the electronics or the complete sensor is exchanged, the manufacturer must be informed (incl. a fault description).



	1.6	Recurring f	unction test	
Reason	The recurring function test is testing the safety function and to find out possible undetected, dangerous failuress. The functional capability of the measuring system has to be tested in adequate time intervals. It is up to the user's responsibility to selct the kind of testing. The time intervals are subject to the PFD _{avg} -value according to the chart and diagram in section " <i>Safety-relevant characteristics</i> ".			
	in IEC demo archite	61508. The func nstrated by the fr ectures it is a goo	e, a recurring function text tional efficiency of the n requent use of the syste od idea to verify the effection tion tests at appropriate	neasuring system is m. In double channel ct of the redundancy
Implementation	Please carry out the test in such a way, that the correct safety function in combination with all components is granted. This is granted by the control of the response height during a filling process. If a filling up to the response height is not practicable, the measuring system has to be responded by an appropriate simulation of the level or the physical measuring effect.			
	The methods and procedures used during the tests must be stated and their suitability must be specified. The tests must be documented.			
	If the function test proves negative, the entire measuring system must be switched out of service and the process held in a safe state by means of other measures.			
	In a multiple channel architecture this applies separately to each channel.			separately to each
	1.7	Safety-relat	ted characteristic	S
Basics	transn accore failure	nitter as well as t ding to IEC 6150 a rates according	electronics, the mechan he process fitting are de 8. The calculations are b to SN 29500. All values luring the operating time	etermined by an FMEDA based on component refer to an average
	For a higher average temperature of 60 °C (140 °F), the failure rates should be multiplied by a factor of 2.5. A similar factor applies if fre- quent temperature fluctuations are expected.			
	The calculations are also based on the specifications stated in chap ter " <i>Planning</i> ".			cations stated in chap-
Service life After 8 to 12 years, the failure rates of the electronic increase, whereby the derived PFD and PFH va (IEC 61508-2, 7.4.7.4, note 3).				
Failure rates				
			Overflow protection (max. operation)	Dry run protection (min. operation)
	λ		0 FIT	0 FIT
	λ _{sd}		506 FIT	481 FIT
	λ_{su}			

124 FIT

 λ_{dd}

135 FIT



	Overflow protection (max. operation)	Dry run protection (min. operation)
λ _{du}	41 FIT	56 FIT
DCs	0 %	0 %
DC _D	75 %	71 %
MTBF = MTTF + MTTR	1.45 x 10 ⁶ h	1.45 x 10 ⁶ h

Fault reaction time

Diagnosis test period < 100 sec.	< 100 sec.
----------------------------------	------------

Single channel architecture

Specific characteristics

SIL	SIL2
HFT	0
Instrument type	Туре В

	Overflow protection (max. operation)	Dry run protection (min. operation)
SFF	94 %	92 %
PFD _{avg}		
T _{Proof} = 1 year	< 0.018 x 10 ⁻²	< 0.024 x 10 ⁻²
T _{Proof} = 5 years	< 0.089 x 10 ⁻²	< 0.122 x 10 ⁻²
T _{Proof} = 10 years	< 0.178 x 10 ⁻²	< 0.243 x 10 ⁻²
PFH	< 0.041 x 10 ⁻⁶ /h	< 0.056 x 10 ⁻⁶ /h

Time-dependent process of PFD_{avg}

The chronological sequence of PFD_{avg} is nearly linear to the operating time over a period up to 10 years. The above values apply only to the T_{Proof} interval after which a recurring function test must be carried out.

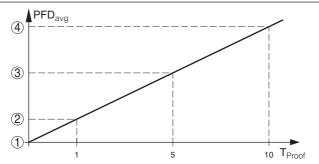


Fig. 1: Chronological sequence of PFD_{avg} (figures see above charts)

- 1 $PFD_{avg} = 0$ 2 PFD_{avg} after 1 year 3 PFD_{avg} after 5 years 4 PFD_{avg} after 10 years



Multiple channel architecture

Specific characteristics If the measuring system is used in a multiple channel architecture, the safety-relevant characteristics of the selected structure of the meas. chain must be calculated specifically for the selected application according to the above failure rates.

A suitable Common Cause Factor must be taken into account.







Certificate / Certificat

Zertifikat / 合格証

VEGA 100981C P0011 C001

exida hereby confirms that the:

VEGAVIB / VEGAWAVE 60 Level Switch Output C, R,T, N, Z

> VEGA Grieshaber KG Schiltach - Germany

Has been assessed per the relevant requirements of:

IEC 61508 : 2000 Parts 1-7 and meets requirements providing a level of integrity to:

Systematic Capability: SC 3 (SIL 3 Capable)

Random Capability: Type B Element

SIL 2 @ HFT = 0; SIL 3 @ HFT = 1; Route 1_H PFD_{AVG} and Architecture Constraints

must be verified for each application

Safety Function:

The VEGAVIB / VEGAWAVE 60 will de-energize its output (C,R, T & N) or set current (Z) to fail-safe output when the level goes above (or below) the trip point within the stated safety accuracy.

Application Restrictions:

The unit must be properly designed into a Safety Instrumented Function per the Safety Manual requirements.

Evaluating Assessor

Certifying Assessor

Page 1 of 2





Certificate / Certificat / Zertifikat / 合格証 VEGA 100981C P0011 C001 Systematic Capability: SC 3 (SIL 3 Capable)

Random Capability: Type B Element

SIL 2 @ HFT = 0; SIL 3 @ HFT = 1; Route 1_H

PFD_{AVG} and Architecture Constraints must be verified for each application

Systematic Capability:

The Product has met manufacturer design process requirements of Safety Integrity Level (SIL) 3. These are intended to achieve sufficient integrity against systematic errors of design by the manufacturer.

A Safety Instrumented Function (SIF) designed with this product must not be used at a SIL level higher than stated.

Random Capability:

The SIL limit imposed by the Architectural Constraints must be met for each element.

Versions:

See listing in the assessment report

IEC 61508 Failure Rates

Model	Fail-Safe state	λ_{SD}	λ_{SU}	λ_{DD}	λ_{DU}
C Max / High trip	Out De-energized	0	506	124	41
C Min / Low trip	Out De-energized	0	481	135	56
R Max / High trip	Out De-energized	0	586	124	27
R Min / Low trip	Out De-energized	0	565	135	37
T Max / High trip	Out De-energized	0	487	124	30
T Min / Low trip	Out De-energized	0	466	135	40
N Max / High trip	Out < 1.0 mA	12	160	390	47
N Min / Low trip	Out < 1.0 mA	36	155	366	52
Z Max / High trip	Out > 12.5 mA	49	387	163	18
Z Min / Low trip	Out < 11.5 mA	39	352	182	43

All failure rates are given in FIT (failures / 10⁹ hours)

SIL Verification:

The Safety Integrity Level (SIL) of an entire Safety Instrumented Function (SIF) must be verified via a calculation of $\mathsf{PFD}_{\mathsf{AVG}}$ considering redundant architectures, proof test interval, proof test effectiveness, any automatic diagnostics, average repair time and the specific failure rates of all products included in the SIF. Each element must be checked to assure compliance with minimum hardware fault tolerance (HFT) requirements.

The following documents are a mandatory part of certification:

Assessment Report: VEGA 03/05-08 R005 V3R2

Safety Manuals: VEGAVIB / VEGAWAVE 60: C: 32002 / 32363 R: 32003 / 32364 T: 32004 / 32365 N: 32005 / 32366 Z: 32006 / 32367 Page 2 of 2

32002-EN-181129



VEGAVIB / VEGAWAVE

60 Level Switch

Sellersville, PA 18960

T-002, V3R8

Printing date:



All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

CE

© VEGA Grieshaber KG, Schiltach/Germany 2018

VEGA Grieshaber KG Am Hohenstein 113 77761 Schiltach Germany Phone +49 7836 50-0 Fax +49 7836 50-201 E-mail: info.de@vega.com www.vega.com