Supplementary instructions

Plug connector ISO 4400

for level sensors





Document ID: 30380







Contents

1	For your safety													
	1.1	Appropriate use	. 3											
	1.2	General safety instructions	. 3											
	1.3	General safety instructions Safety instructions for Ex areas	. 3											
2	Prod	luct description												
3	Mounting													
	3.1	Mounting preparations	. 5											
	3.2	Mounting preparations Installation procedure	. 5											
4		necting to power supply												
	4.1	Connection procedure	. 6											
	4.2		. 7											
5	Supplement													
	5.1	Technical data	. 8											



(Ex)

Please note the Ex-specific safety information for installation and operation in Ex areas. These safety instructions are part of the operating instructions manual and come with the Ex-approved instruments.

Editing status: 2016-06-07



1 For your safety

1.1 Appropriate use

The plug connectors belong to the accessories for level, switching and pressure sensors. They provide a detachable connection to power supply/signal processing for level switches.

1.2 General safety instructions

The safety information in the operating instructions manual of the respective sensor must be noted.

1.3 Safety instructions for Ex areas

Please note the Ex-specific safety information for installation and operation in Ex areas. These safety instructions are part of the operating instructions manual and come with the Ex-approved instruments.

For instruments with Exd or StEx approval, the use of plug connectors is not allowed.



2 Product description

Scope of delivery

The scope of delivery encompasses:

- Instrument plug to be screwed in the sensor housing
- Angle junction box for cable connection
- Documentation
 - This supplementary instructions manual

Function

The plug connector is an accessory part for sensors with single or double chamber housing. It is used as separable connection to power supply and signal processing.

ConfigurationThe plug connector consists of an instrument plug, a multicore, fixed
connected cable as well as the corresponding angle junction box.
The individual cores are marked with figures for the terminals of the
electronics module.

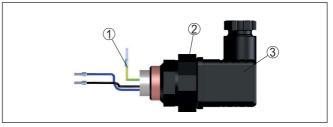


Fig. 1: Configuration plug connector ISO 4400 - Example

- 1 Connection cable
- 2 Instrument plug
- 3 Angle junction box

Area of application

The plug connector is used instead of the cable gland in the single or double chamber housing.



Tools

3 Mounting

3.1 Mounting preparations

The following tools are required for mounting:

- Spanner SW 24 for unscrewing the cable gland
- Screwdriver SW 32 for screwing in the plug

3.2 Installation procedure

Position in the housing

The following illustration shows the position of the cable gland in the respective housing:

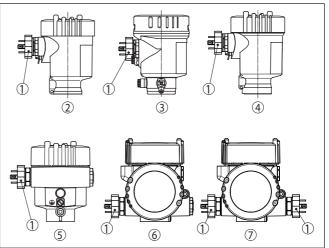


Fig. 2: Position of the plug connector on different instrument versions

- 1 Cable gland
- 2 Single chamber plastic
- 3 Single chamber stainless steel (electropolished)
- 4 Single chamber stainless steel (precision casting)
- 5 Single chamber Aluminium
- 6 Double chamber stainless steel (precision casting), Aluminium
- 7 Double chamber stainless steel (precision casting), Aluminium with additional current output

Installation

Proceed as follows to mount the plug connector:

- 1. Open the cover of the electronics or connection compartment
- 2. Unscrew the cable gland
- 3. Screw in the instrument plug
- 4. Connect the wires according to chapter "Connect"

The mounting of the plug connector is finished.

Disassembly is carried out in reverse order.



4 Connecting to power supply

4.1 Connection procedure

Proceed as follows:

- 1. Loosen the screw on the rear of the plug connector
- 2. Remove angle junction box and sealding from the housing plug
- 3. Remove the plug insert from the plug housing

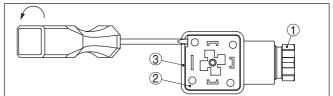


Fig. 3: Loosen the plug insert

- 1 Cable gland
- 2 Plug insert
- 3 Plug housing
- Remove approx. 5 cm of the cable mantle, strip approx. 1 cm insulation from the individual wires
- 5. Lead the cable through the cable gland into the plug housing
- 6. Connect the wire ends to the screw terminals according to the wiring plan

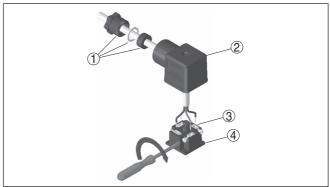


Fig. 4: Connection to the screw terminals

- 1 Cable gland
- 2 Plug housing
- 3 Plug insert
- 4 Plug seal
- 7. Snap the plug insert into the plug housing and insert the sensor seal
- 8. Plug the plug connector with sealing onto the instrument plug and tighten the screw

The electrical connection is finished.



4.2 Wiring plan

Each respective wiring plan shows the assignment of the individual pins of the plug connector to the respective signal outputs. The table shows the assignment of the individual contact pins to the terminals of the sensor electronics.

Two-wire output, contactless electronic switch, NAMUR output

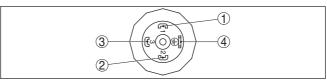


Fig. 5: Top view of the plug connector

- 1 + (Pin 1)
- 2 (Pin 2)
- 3 free (Pin 3)
- 4 Screen (Pin 4)

Contact pin	Colour - connection cable	Terminal, electronics module
Pin 1	Black	1
Pin 2	Blue	2
Pin 4	Green/Yellow	

5 Supplement

5.1 Technical data

Contact support	PA
Contact surface	Sn
Housing	PA
Housing seal	NBR
Temperature range	
Plug connector - separate	-40 +125 °C (-40 +257 °F)
Plug - mounted on the sensor	The lowest temperature is applicable
Electromechanical data	
Cable gland	PG 9
Cable diameter	4.5 7 mm
Type of connection	Screws
Wire cross-section	1.5 ² mm
Electrical data	
Rated current	16 A
Reference voltage	250 V AC/DC
Degree of soiling	3
Forward resistance	$\leq 4 \text{ m}\Omega$
Protection rating	
Plug connector - separate (connected status)	IP 65

Plug connector - mounted on the sensor The lowest protection category applies (connected status)









Printing date:



All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

CE

© VEGA Grieshaber KG, Schiltach/Germany 2016

VEGA Grieshaber KG Am Hohenstein 113 77761 Schiltach Germany Phone +49 7836 50-0 Fax +49 7836 50-201 E-mail: info.de@vega.com www.vega.com