


#### Reliable

Reliable monitoring of cooler process

#### **Cost effective**

Optimal cooling with minimum energy expenditure

User friendly Maintenance-free measurement

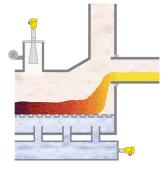

# Clinker cooler

## Level and pressure measurement in the clinker cooler

To produce cement, the raw meal is burned to clinker in a long rotary kiln. After leaving the rotary kiln, the clinker has a temperature of up to +1300 °C and must be cooled down to a temperature of about +200 °C for further storage. To achieve this, the clinker bed is cooled with a continuous stream of air. Pressure monitoring is required in the lower part of the clinker cooler to make the cooling as effective as possible. The material height of the hot clinker, at over 1000 °C on the conveyor belt, also has to be reliably measured.

#### More details



## **VEGABAR 82**

Pressure transmitter for pressure monitoring in the clinker cooler

- High plant availability thanks to rugged measuring cell
- Maintenance-free through front-flush mounting

## **Show Product**

# **VEGAPULS 6X**

Non-contact level measurement with radar in the clinker cooler

- Reliable measurement despite extremely high media temperatures
- Effective antenna cooling via blower or compressed air
- Long service life by utilising a temperature-resistant antenna system

#### **Show Product**



PRO	PRO
VEGABAR 82 Show Product	VEGAPULS 6X Show Product
Measuring range - Distance -	Measuring range - Distance 120 m
Measuring range - Pressure -1 100 bar	Process temperature -196 450 °C
Process temperature -40 150 °C	Process pressure -1 160 bar
Process pressure -1 100 bar	Accuracy ± 1 mm
Accuracy 0.05 % Materials, wetted parts	Frequency 6 GHz 26 GHz 80 GHz
PVDF 316L Alloy C22 (2.4602) PP	Beam angle ≥ 3°
1.4057 1.4410 Alloy C276 (2.4819) Duplex (1.4462) Titanium Grade 2 (3.7035)	Materials, wetted parts PTFE PVDF 316L PP PEEK
Threaded connection   ≥ G½, ≥½ NPT	Threaded connection ≥ G¾, ≥ ¾ NPT
Flange connection ≥ DN15, ≥ ½"	Flange connection ≥ DN20, ≥ ¾"
Hygenic fittings     Clamp ≥ 1" - DIN32676, ISO2852     Slotted nut ≥ DN25 - DIN 11851     hygienic fitting with tension flange DN32     hygienic fitting F40 with compression nut     DRD connection ø 65 mm     SMS 1145 DN51     SMS DN38     Swagelok VCR screwing     Varivent G125     Varivent N50-40     for NEUMO BioControl D50 PN16 / 316L	Hygenic fittingsClamp $\geq 11/2"$ - DIN32676, ISO2852Slotted nut $\geq 2"$ , DN50 - DIN 11851Varivent $\geq$ DN25hygienic fitting with tension flange DN32hygienic fitting F40 with compression nutHygienic screw connections $\geq$ DN50 tube ø53 -DIN11864-1-AHygienic flange connection $\geq$ DN50 DIN11864-2Hygienic clamp connection $\geq$ DN50 pipe Ø53 - DIN11864-3-ADRD connection ø 65 mmSMS 1145 DN51
EPDM FKM FFKM	

