



**Reliable**

Reliable monitoring of cooler process

**Cost effective**

Optimal cooling with minimum energy expenditure

**User friendly**


Maintenance-free measurement

## Clinker cooler

### Level and pressure measurement in the clinker cooler

To produce cement, the raw meal is burned to clinker in a long rotary kiln. After leaving the rotary kiln, the clinker has a temperature of up to +1300 °C and must be cooled down to a temperature of about +200 °C for further storage. To achieve this, the clinker bed is cooled with a continuous stream of air. Pressure monitoring is required in the lower part of the clinker cooler to make the cooling as effective as possible. The material height of the hot clinker, at over 1000 °C on the conveyor belt, also has to be reliably measured.

[More details](#)

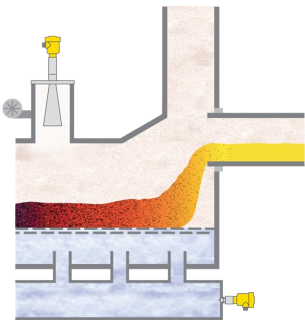

#### VEGABAR 82

Pressure transmitter for pressure monitoring in the clinker cooler

- High plant availability thanks to rugged measuring cell
- Maintenance-free through front-flush mounting

[Show Product](#)



#### VEGAPULS 6X

Non-contact level measurement with radar in the clinker cooler

- Reliable measurement despite extremely high media temperatures
- Effective antenna cooling via blower or compressed air
- Long service life by utilising a temperature-resistant antenna system

[Show Product](#)

PRO

**VEGABAR 82**  
[Show Product](#)

**Measuring range - Distance**

-

**Measuring range - Pressure**

-1 ... 100 bar

**Process temperature**

-40 ... 150 °C

**Process pressure**

-1 ... 100 bar

**Accuracy**

0.05 %

**Materials, wetted parts**

PVDF  
 316L  
 Alloy C22 (2.4602)  
 PP  
 1.4057  
 1.4410  
 Alloy C276 (2.4819)  
 Duplex (1.4462)  
 Titanium Grade 2 (3.7035)

**Threaded connection**

≥ G½, ≥ ½ NPT

**Flange connection**

≥ DN15, ≥ ½"

**Hygienic fittings**

Clamp ≥ 1" - DIN32676, ISO2852  
 Slotted nut ≥ DN25 - DIN 11851  
 hygienic fitting with tension flange DN32  
 hygienic fitting F40 with compression nut  
 DRD connection ø 65 mm  
 SMS 1145 DN51  
 SMS DN38  
 Swagelok VCR screwing  
 Varivent G125  
 Varivent N50-40  
 for NEUMO BioControl D50 PN16 / 316L

**Seal material**

EPDM  
 FKM  
 FFKM

PRO

**VEGAPULS 6X**  
[Show Product](#)

**Measuring range - Distance**

120 m

**Process temperature**

-196 ... 450 °C

**Process pressure**

-1 ... 160 bar

**Accuracy**

± 1 mm

**Frequency**

6 GHz  
 26 GHz  
 80 GHz

**Beam angle**

≥ 3°

**Materials, wetted parts**

PTFE  
 PVDF  
 316L  
 PP  
 PEEK

**Threaded connection**

≥ G¾, ≥ ¾ NPT

**Flange connection**

≥ DN20, ≥ ¾"

**Hygienic fittings**

Clamp ≥ 1½" - DIN32676, ISO2852  
 Slotted nut ≥ 2", DN50 - DIN 11851  
 Varivent ≥ DN25  
 hygienic fitting with tension flange DN32  
 hygienic fitting F40 with compression nut  
 Hygienic screw connections ≥ DN50 tube ø53 -  
 DIN11864-1-A  
 Hygienic flange connection ≥ DN50 DIN11864-2  
 Hygienic clamp connection ≥ DN50 pipe Ø53 - DIN11864-  
 3-A  
 DRD connection ø 65 mm  
 SMS 1145 DN51