

Reliable

High measurement certainty without mechanical wear

Cost effective

Optimal information on the available gas quantity

User friendly

Maintenance-free, reliable operation of the facility



Volume and pressure monitoring in the biogas storage facility

The methane gas extracted from the digestion tank is temporarily stored in a gas reservoir. Depending on the design of the gas storage facility, either a flexible diaphragm of plastic or a floating roof is used for volume equalization. The gas volume and gas pressure are measured continuously to ensure reliable and safe operation.

More details



VEGAPULS 6X

Continuous level measurement with radar for permanent gas volume measurement

- Reliable, maintenance-free measurement
- Independent of environmental influences
- Easy integration into existing gas storage facilities
- Wireless operation via Bluetooth with smartphone, tablet or PC

Show Product

VEGABAR 82

Monitoring of the gas pressure in the gas reservoir

- High measuring accuracy through use of finely graduated measuring cells
- Robust sensor construction for high availability
- . Long-term stability of the ceramic measuring cell ensures maintenance-free operation


Show Product

VEGATRENN 141

Separator for the optimum supply of power to the connected sensors

- On-site diagnostics for direct display of status via LEDs
- Simple parametrization interface using the HART sockets for user-friendly operation
- Galvanic separation of sensors and PLC is secured

Show Product

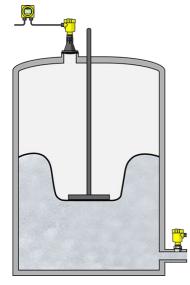





VEGAPULS 6X Show Product	VEGABAR 82 Show Product	VEGATRENN 14: Show Product
e e e e e e e e e e e e e e e e e e e		
Measuring range - Distance 120 m	Measuring range - Distance -	Protection rating IP20
Process temperature -196 450 °C	Measuring range - Pressure -1 100 bar	Input 1 x 4 20 mA/HART sensor input
Process pressure -1 160 bar	Process temperature -40 150 °C	Output 1 x 4 20 mA
Accuracy ± 1 mm	Process pressure -1 100 bar	Ambient temperature -20 60 °C
Frequency 6 GHz 26 GHz	Accuracy 0.05 %	
80 GHz Beam angle ≥ 3°	Materials, wetted parts PVDF 316L Alloy C22 (2.4602)	
Materials, wetted parts PTFE PVDF 316L PP PEEK	PP 1.4057 1.4410 Alloy C276 (2.4819) Duplex (1.4462) Titanium Grade 2 (3.7035)	
Threaded connection ≥ G¾, ≥ ¾ NPT	Threaded connection ≥ G ¹ / ₂ , ≥ ½ NPT	
Flange connection ≥ DN20, ≥ ¾"	Flange connection ≥ DN15, ≥ ½"	
Hygenic fittings Clamp ≥ $1\frac{1}{2}$ " - DIN32676, ISO2852 Slotted nut ≥ 2", DN50 - DIN 11851 Varivent ≥ DN25 hygienic fitting with tension flange DN32 hygienic fitting F40 with compression nut Hygienic screw connections ≥ DN50 tube ø53 - DIN11864-1-A Hygienic flange connection ≥ DN50 DIN11864-2 Hygienic clamp connection ≥ DN50 pipe Ø53 - DIN11864- 3-A	Hygenic fittings Clamp ≥ 1" - DIN32676, ISO2852 Slotted nut ≥ DN25 - DIN 11851 hygienic fitting with tension flange DN32 hygienic fitting F40 with compression nut DRD connection ø 65 mm SMS 1145 DN51 SMS DN38 Swagelok VCR screwing Varivent G125 Varivent N50-40 for NEUMO BioControl D50 PN16 / 316L	
Hygienic clamp connection ≥ DN50 pipe Ø53 - DIN11864-	Varivent G125 Varivent N50-40	

FFKM

