



#### Reliable

The high reliability of measurement protects the vacuum pumps from water intake

#### Cost effective

High availability of the vacuum system

#### User friendly


Easy to install, setup without calibration

## Water separator

### Level measurement in the water separator and pressure measurement upstream of the vacuum pump

The paper web is dewatered in the press and wire section of the paper machine. As the resulting water is removed via vacuum pipelines which are monitored by pressure transmitters to control the vacuum pump. It is also very important to prevent water from getting into the vacuum pump. To achieve this, water separators are built into the feed lines and the separated water is drawn off by a water pump. A continuous level measurement is used to control the level and the pump.

[More details](#)

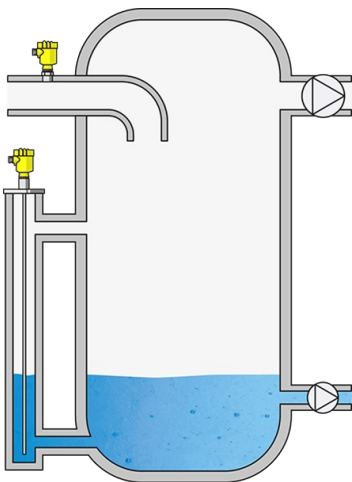

#### VEGAFLEX 81

Level measurement with guided wave radar in the water separator

- Reliable measurement even in vacuum
- High accuracy even with small measuring ranges
- Measurement in the bypass independent of process conditions

[Show Product](#)



#### VEGABAR 82

Pressure measurement in the pipeline for regulation of the vacuum pump

- Self-cleaning effect through front-flush installation in the pipe
- Permanently vacuum resistant
- Highly abrasion resistant CERTEC® measuring cell

[Show Product](#)

PRO

## VEGAFLEX 81

[Show Product](#)



**Measuring range - Distance**  
75 m

**Process temperature**  
-60 ... 200 °C

**Process pressure**  
-1 ... 40 bar

**Accuracy**  
± 2 mm

**Version**  
Basic version for exchangeable cable ø 2; ø 4 mm  
Basic version for exchangeable rod ø 8 mm  
Basic version for exchangeable rod ø 12 mm  
Coax version ø 21.3 mm for ammonia application  
Coax version ø 21.3 mm with single hole  
Coax version ø 21.3 mm with multiple hole  
Coax version ø 42.2 mm with multiple hole  
Exchangeable rod ø 8 mm  
Exchangeable rod ø 12 mm  
Exchangeable cable ø 2 mm with gravity weight  
Exchangeable cable ø 4 mm with gravity weight  
Exchangeable cable ø 2 mm with centering weight  
Exchangeable cable ø 4 mm with centering weight  
Exchangeable cable ø 4 mm without weight  
exchangeable, PFA-coated cable ø4 mm with non-coated centering weight

**Materials, wetted parts**  
PFA  
316L  
Alloy C22 (2.4602)  
Alloy 400 (2.4360)  
Alloy C276 (2.4819)  
Duplex (1.4462)  
304L

**Threaded connection**  
≥ G¾, ≥ ¾ NPT

**Flange connection**  
≥ DN25, ≥ 1"

**Seal material**  
EPDM  
FKM  
FFKM  
Silicone FEP coated  
Borosilicate glass

**Housing material**  
Plastic  
Aluminium  
Stainless steel (precision casting)  
Stainless steel (electropolished)

PRO

## VEGABAR 82

[Show Product](#)



**Measuring range - Distance**  
-

**Measuring range - Pressure**  
-1 ... 100 bar

**Process temperature**  
-40 ... 150 °C

**Process pressure**  
-1 ... 100 bar

**Accuracy**  
0.05 %

**Materials, wetted parts**  
PVDF  
316L  
Alloy C22 (2.4602)  
PP  
1.4057  
1.4410  
Alloy C276 (2.4819)  
Duplex (1.4462)  
Titanium Grade 2 (3.7035)

**Threaded connection**  
≥ G½, ≥ ½ NPT

**Flange connection**  
≥ DN15, ≥ ½"

**Hygienic fittings**  
Clamp ≥ 1" - DIN32676, ISO2852  
Slotted nut ≥ DN25 - DIN 11851  
hygienic fitting with tension flange DN32  
hygienic fitting F40 with compression nut  
DRD connection ø 65 mm  
SMS 1145 DN51  
SMS DN38  
Swagelok VCR screwing  
Varivent G125  
Varivent N50-40  
for NEUMO BioControl D50 PN16 / 316L

**Seal material**  
EPDM  
FKM  
FFKM