



Reliable

The materials used do not interact with the medium.

Cost effective

Maximum process efficiency is guaranteed through reliable measurement

User friendly

Standardized adapter system for all process fittings

Steam separator

Steam separator pressure measurement and point level detection.

In the production of purified water, the process begins with tap water being fed into the steam separator. The tap water evaporates there and is fed into the condenser. Evaporation is effected by a heat exchanger supplied with saturated steam. To ensure that the heat exchanger is always covered with tap water, reliable level detection is required. The pressure inside the steam separator must be kept constant in order to achieve maximum efficiency.

[More details](#)



VEGABAR 83

Pressure transmitter for gauge pressure measurement in the vapour phase

- Good cleanability thanks to hygienic design
- Approved materials according to EC 1935/2004 and FDA
- Elastomer-free transmitter construction reduces maintenance costs

[Show Product](#)



VEGABAR 29

Pressure transmitter for pressure measurement in the saturated steam pipeline

- Accurate process control thanks to fast response time
- Installation above water pocket tube allows use even at high temperatures
- Easy-to-read display with VDMA menu structure that includes plain text descriptions

[Show Product](#)




VEGAPOINT 21

Capacitive level switch for point level detection in the steam separator

- Reliable switching point in water and steam
- Good cleanability thanks to hygienic design
- 360° display of the switching status
- IO-Link connection for simple integration

[Show Product](#)

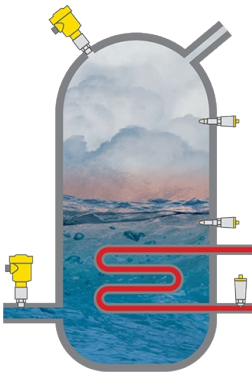

PRO

BASIC

BASIC

VEGABAR 83
[Show Product](#)



Measuring range - Distance

-

Measuring range - Pressure

-1 ... 1000 bar

Process temperature

-40 ... 200 °C

Process pressure

-1 ... 1000 bar

Accuracy

0.075 %

Materials, wetted parts

316L
Alloy C22 (2.4602)
316Ti (1.4571)
Alloy C4 (2.4610)

Threaded connection

≥ G½, ≥ ½ NPT

Flange connection

≥ DN25, ≥ 1"

Hygienic fittings

Slotted nut ≥ DN25 - DIN 11851
Varivent ≥ DN25
hygienic fitting with tension flange DN32
Hygienice flange connection ≥ DN50 DIN11864-2
SMS 1145 DN51
SMS DN38
Hygienic fittings ≥ DN33 - DIN11864-1-A
Hyg. collar clamp adapter DN40PN40 DIN11864-3-A
Hyg. clamp connection DIN11864-3-A; DN50 Rohr ø53
Swagelok VCR screwing
Varivent G125

Seal material

no media contact

VEGABAR 29
[Show Product](#)



Measuring range - Pressure

-1 ... 1000 bar

Process temperature

-40 ... 130 °C

Accuracy

0.3 %

Materials, wetted parts

316L

Threaded connection

≥ G½, ≥ ½ NPT

Hygienic fittings

Clamp ≥ 2", DN50 - DIN32676, ISO2852
Clamp ≥ 1" - DIN32676, ISO2852
Clamp ≥ 1½" - DIN32676, ISO2852
Slotted nut ≥ 1½", ≥ DN40 - DIN 11851
Slotted nut ≥ DN25 - DIN 11851
SMS 1145 DN51
SMS DN38
Hygienic fittings ≥ DN25 - DIN11864-1-A
Hygienic fittings ≥ DN40 - DIN11864-1-A
Varivent N50-40
SMS DN25
Ingold connection PN10
Varivent F25

Protection rating

IP65
IP68 (0,5 bar)/IP69

Output

4 ... 20 mA
Three-wire (PNP/NPN, 4 ... 20 mA)
IO-Link

Ambient temperature

-40 ... 70 °C

VEGAPOINT 21
[Show Product](#)



Measuring range - Distance

-

Process temperature

-40 ... 115 °C

Process pressure

-1 ... 64 bar

Materials, wetted parts

316L
PEEK

Threaded connection

≥ G½, ≥ ½ NPT

Hygienic fittings

Clamp ≥ 2", DN50 - DIN32676, ISO2852
Clamp ≥ 1" - DIN32676, ISO2852
Clamp ≥ 1½" - DIN32676, ISO2852
Slotted nut ≥ 1½", ≥ DN40 - DIN 11851
Slotted nut ≥ DN25 - DIN 11851
Slotted nut ≥ DN32 - DIN 11851

Seal material

EPDM
FKM

Protection rating

IP66/IP67
IP69

Output

Transistor (NPN/PNP)
IO-Link

Ambient temperature

-40 ... 70 °C