



Reliable

The materials used do not interact with the medium.

Cost effective

Maximum process efficiency is guaranteed through reliable measurement

User friendly

Standardized adapter system for all process fittings

Condenser

Condenser pressure and point level measurement.

In the condenser, potable water evaporated as steam and condensed to form pure, clean water. Inside the condenser there is a cooling system that cools the steam to make it condense. The feed of cooling liquid is monitored in the pipeline. Point level detection ensures that sufficient condensate is present to prevent steam from directly entering the circulation reservoir.

More details



VEGABAR 83

Pressure transmitter for measurement in pipelines

- The materials used have no effect on the purified water.
- Good cleanability thanks to hygienic design
- Metallic measuring cell for front-flush pressure measurement, even at high temperatures

Show Product



VEGABAR 28

Pressure transmitter for pressure measurement in the coolant inlet

- Ceramic CERTEC® measuring cell is resistant to aggressive cooling medium
- Reliable measurement, even with the formation of condensation, thanks to encapsulated measuring cell
- Compact design facilitates installation

Show Product




VEGAPOINT 21

Capacitive level switch for point level detection in the condenser

- Reliable switching point in water and steam
- Good cleanability thanks to hygienic design
- 360° visible display of the switching status

Show Product

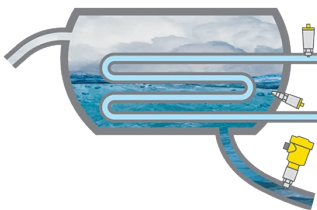

PRO

VEGABAR 83
[Show Product](#)

Measuring range - Distance

-

Measuring range - Pressure

-1 ... 1000 bar

Process temperature

-40 ... 200 °C

Process pressure

-1 ... 1000 bar

Accuracy

0.075 %

Materials, wetted parts

316L
 Alloy C22 (2.4602)
 316Ti (1.4571)
 Alloy C4 (2.4610)

Threaded connection

≥ G½, ≥ ½ NPT

Flange connection

≥ DN25, ≥ 1"

Hygienic fittings

Slotted nut ≥ DN25 - DIN 11851
 Varivent ≥ DN25
 hygienic fitting with tension flange DN32
 Hygienic flange connection ≥ DN50 DIN11864-2
 SMS 1145 DN51
 SMS DN38
 Hygienic fittings ≥ DN33 - DIN11864-1-A
 Hyg. collar clamp adapter DN40PN40 DIN11864-3-A
 Hyg. clamp connection DIN11864-3-A; DN50 Rohr ø53
 Swagelok VCR screwing
 Varivent G125

Seal material

no media contact

BASIC

VEGABAR 28
[Show Product](#)

Measuring range - Pressure

-1 ... 60 bar

Process temperature

-40 ... 130 °C

Accuracy

0.3 %

Materials, wetted parts

PVDF
 Duplex (1.4462)
 Ceramic
 316/316L

Threaded connection

≥ G½, ≥ ½ NPT

Hygienic fittings

Clamp ≥ 2", DN50 - DIN32676, ISO2852
 Clamp ≥ 1" - DIN32676, ISO2852
 Clamp ≥ 1½" - DIN32676, ISO2852
 Slotted nut ≥ DN25 - DIN 11851
 Slotted nut ≥ DN32 - DIN 11851
 SMS 1145 DN51
 SMS DN38
 Hygienic fittings ≥ DN25 - DIN11864-1-A
 Hygienic fittings ≥ DN40 - DIN11864-1-A
 Varivent N50-40
 SMS DN25
 Ingold connection PN10
 Varivent F25

Seal material

EPDM
 FKM
 FFKM

Protection rating

IP65
 IP68 (0,5 bar)/IP69

Output

4 ... 20 mA
 Three-wire (PNP/NPN, 4 ... 20 mA)
 IO-Link

Ambient temperature

-40 ... 70 °C

BASIC

VEGAPOINT 21
[Show Product](#)

Measuring range - Distance

-

Process temperature

-40 ... 115 °C

Process pressure

-1 ... 64 bar

Materials, wetted parts

316L
 PEEK

Threaded connection

≥ G½, ≥ ½ NPT

Hygienic fittings

Clamp ≥ 2", DN50 - DIN32676, ISO2852
 Clamp ≥ 1" - DIN32676, ISO2852
 Clamp ≥ 1½" - DIN32676, ISO2852
 Slotted nut ≥ 1½", ≥ DN40 - DIN 11851
 Slotted nut ≥ DN25 - DIN 11851
 Slotted nut ≥ DN32 - DIN 11851

Seal material

EPDM
 FKM

Protection rating

IP66/IP67
 IP69

Output

Transistor (NPN/PNP)
 IO-Link

Ambient temperature

-40 ... 70 °C