



Safety instructions

VEGASWING 66

Intrinsic safety
Two-wire (8/16 mA)



CE 0044



Document ID: 54720



VEGA

Contents

1	Area of applicability.....	4
2	Important specification in the type code.....	4
3	General information.....	5
4	Application area.....	5
5	Specific conditions of use ("X" identification)	6
6	Important information for mounting and maintenance.....	7
7	Safe operating mode	9
8	Instructions for zone 0, zone 0/1 applications	9
9	Potential equalization/Grounding	9
10	Electrostatic charging (ESD)	9
11	Electrical data.....	10
12	Thermal data	10

Supplementary documentation:

- Operating Instructions VEGASWING 66
- EU-type approval certificate PTB 13 ATEX 2006 X (Document ID: 54721)
- EU declaration of conformity (Document ID: 44621)

Editing status: 2022-05-18

DE	Sicherheitshinweise für den Einsatz in explosionsgefährdeten Bereichen
EN	Safety instructions for the use in hazardous areas
FR	Consignes de sécurité pour une application en atmosphères explosibles
IT	Normative di sicurezza per l'impiego in luoghi con pericolo di esplosione
ES	Instrucciones de seguridad para el empleo en áreas con riesgo de explosión
PT	Normas de segurança para utilização em zonas sujeitas a explosão
NL	Veiligheidsaanwijzingen voor gebruik op plaatsen waar ontploffingsgevaar kan heersen
SV	Säkerhetsanvisningar för användning i explosionsfarliga områden
DA	Sikkerhedsforskrifter til anvendelse i explosionsfarlig atmosfære
FI	Turvallisuusohjeet räjähdysvaarallisissa tiloissa käyttöä varten
EL	Υποδείξεις ασφαλείας για τη χρησιμοποίηση σε περιοχές που υπάρχει κίνδυνος έκρηξης

DE	Die vorliegenden Sicherheitshinweise sind im Download unter www.vega.com standardmäßig in den Sprachen deutsch, englisch, französisch und spanisch verfügbar. Weitere EU-Landessprachen stellt VEGA nach Anforderungen zur Verfügung.
EN	These safety instructions are available as a standard feature in the download area under www.vega.com in the languages German, English, French and Spanish. Further EU languages will be made available by VEGA upon request.
FR	Les présentes consignes de sécurité sont disponibles au téléchargement sous www.vega.com en standard en allemand, en anglais, en français et en espagnol. VEGA met à disposition d'autres langues de l'Union Européenne selon les exigences.
ES	Las indicaciones de seguridad presentes están disponibles en la zona de descarga de www.vega.com de forma estándar en los idiomas inglés, francés y español. VEGA pone a disposición otros idiomas de la UE cuando son requeridos.

1 Area of applicability

These safety instructions apply to the level sensors VEGASWING 66 of type series:

- SWING66(*).AC*****Z/L****

with the electronics versions

- Z - Two-wire
- L - Two-wire with SIL qualification

According to EU type approval certificate PTB 13 ATEX 2006 X (certificate number on the type label) and for all instruments with safety instruction 54720.

Subject of the evaluation of VEGASWING 66 in the version with ignition protection type intrinsic safety "Ex i" are the types VEGASWING 66.

The versions VEGASWING 66 with the features "AC", "AO" and "AU" on the type label are certified version with ignition protection type intrinsic safety or flame proofing intrinsic safety also with a ship certificate/overfill protection.

Feature "AC" in the type code: Certificate intrinsic safety Ex ia

Feature "AO" in the type code: Certificate intrinsic safety but also ship certificate

Feature "AU" in the type code: Certificate intrinsic safety but also overfill protection

The dust-explosion protection, the ship certificate and the certification as overfill protection are **not** subject of the assessment and evaluation acc. to the EU Type approval certificate PTB 13 ATEX 2006 X.

The classification as well as the respective standards are stated in the EU type approval certificate:

- EN IEC 60079-0: 2018
- EN 60079-11: 2012
- IEC 60079-26: 2021

Type of protection marking:

- II 1G Ex ia IIC T6 Ga
- or
- II 1/2G Ex ia IIC T6 Ga/Gb
- or
- II 2G Ex ia IIC T6 Gb

2 Important specification in the type code

VEGASWING SG66(*).abcdefghik

Position		Feature	Description
a	Scope	A	ATEX / Europe
b	Approval	C	ATEX II 1G, 1/2G, 2G Ex ia IIC T6 Ga, Ga/Gb, Gb
		O	ATEX II 1G, 1/2G, 2G Ex ia IIC T6 Ga, Ga/Gb, Gb + Ship approval
		U	ATEX II 1G, 1/2G, 2G Ex ia IIC T6 Ga, Ga/Gb, Gb + overfill protection (WHG)

Position		Feature	Description
c	Version / Material	K	Compact version / Inconel 718 (2.4668), Alloy C22 (2.4602)
		R	with tube extension / 316L and Inconel 718 (2.4668), Alloy C22 (2.4602)
		H	with tube extension / Alloy C22 (2.4602) and Inconel 718 (2.4668)
de	Process fitting / Material	**	Process fittings acc. to industry standard
f	Second line of defense / Process temperature	A	with / -196 ... +450 °C
g	Electronics	Z	Two-wire (8/16 mA) 9.6 ... 35 V DC
		L	Two-wire (8/16 mA) 9.6 ... 35 V DC with SIL qualification
h	Housing / Protection	K	Plastic single chamber / IP66/IP67
		A	Aluminium single chamber / IP66/IP68 (0.2 bar)
		8	Stainless steel single chamber (electropolished) / IP66/IP68 (0.2 bar)
		V	Stainless steel single chamber (precision casting) / IP66/IP68 (0.2 bar)
		*	Further Housing / Protection with special colour
i	Cable entry / Connection	M	M20 x 1.5 / Cable gland PA black (ø 5 ... 9 mm)
		N	½ NPT / Blind plug
		*	Further suitable Cable entry / Connection
k	Certificates	X	No
		M	Yes

In the following, all above mentioned versions are called VEGASWING 66. If parts of these safety instructions refer only to certain versions, then these will be mentioned explicitly with their type code.

3 General information

The VEGASWING 66 are used for level measurement in hazardous areas.

The VEGASWING 66 are suitable for applications in hazardous atmospheres of all combustible materials of explosion groups IIA, IIB and IIC.

The VEGASWING 66 are suitable for applications requiring category 1G (EPL Ga), 1/2G (EPL Ga/Gb) or 2G (EPL Gb) instruments.

4 Application area

Category 1G (EPL Ga instruments)







The VEGASWING 66 with the mechanical fixing element are installed in hazardous areas of zone 0 requiring category 1G (EPL Ga) instruments.

Category 1/2G (EPL Ga/Gb instruments)

The VEGASWING 66 with mechanical fixing element are installed in hazardous areas of zone 1 requiring instruments of category 2G (EPL Gb). The mechanical fixing element, process connection element is installed in the separating wall, which separates areas requiring instruments of category 2G (EPL Gb) or 1G (EPL Ga). The sensor measuring system is installed in hazardous areas of zone 0 requiring instruments of category 1G (EPL Ga).

Category 2G (EPL Gb instruments)

The VEGASWING 66 with the mechanical fixing element are installed in hazardous areas of zone 1 requiring category 2G (EPL Gb) instruments.

VEGA Instrument	2G (EPL Gb)	1/2G (EPL Ga/Gb)	1G (EPL Ga)
Ex Zone 2 			
Ex Zone 1 			
Ex Zone 0 			

5 Specific conditions of use ("X" identification)

The following overview is listing all special properties of VEGASWING 66, which make a labelling with the symbol "X" behind the certificate number necessary.

Electrostatic charging (ESD)

You can find the details in chapter " *Electrostatic charging (ESD)*" of these safety instructions.

Ambient temperature

You can find the details in chapter " *Thermal data*" of these safety instructions.

Impact and friction sparks

The VEGASWING 66 in light metal versions (e.g. aluminium, titanium, zircon) must be mounted in such a way that sparks from impact and friction between light metals and steel (except stainless steel, if the presence of rust particles can be excluded) cannot occur.

Non-grounded, metallic parts

The resistance between aluminium housing to metal measuring point identification plate is $> 10^9$ Ohm.

The measuring point identification label must be connected to the earth connection using the accessories supplied. To ensure that this connection is always present, it must be checked at regular intervals.

The capacitance of the metal measuring point identification label (not grounded) was measured as follows:

Measurement loop identification label	Capacitance
45 x 23 mm (standard)	21 pF
100 x 30 mm	52 pF
73 x 47 mm	61 pF

Media resistance

The wetted materials must be resistant against the measured media.

The min. fatigue strength of the vibrating element is 8.6×10^{11} load changes with a max. amplitude of 34 μm . The lifetime is minimum 20 years.

All VEGASWING 66 contain a separation element according to EN 60079-0. This partition wall is made of stainless steel with a thickness of ≥ 1 mm.

Installation

The VEGASWING 66 must be mounted in a way that adequately ensures that the sensor tube will not oscillate, vibrate or bend due to the movements of other installations or the medium in the vessel.

Use of an overvoltage arrester

If necessary, an overvoltage arrester can be connected in front of the VEGASWING 66.

When used as category 1/2G (EPL Ga/Gb instrument), the VEGASWING 66 does not require measures against voltage surges as per EN 60079-14.

When used as category 1G (EPL Ga instrument), a suitable overvoltage arrester must be connected in between as protection against overvoltages, as far as required according to EN 60079-14.

6 Important information for mounting and maintenance

General instructions

The following requirements must be fulfilled for mounting, electrical installation, setup and maintenance of the instrument:

- The staff must be qualified according the respective tasks
- The staff must be trained in explosion protection
- The staff must be familiar with the respectively valid regulations, e.g. planning and installation acc. to IEC/EN 60079-14
- Make sure when working on the instrument (mounting, installation, maintenance) that there is no explosive atmosphere present, the supply circuits should be voltage-free, if possible.
- The instrument has to be mounted according to the manufacturer specifications, the EU type approval certificate and the valid regulations and standards
- Modifications on the instrument can influence the explosion protection and hence the safety, therefore repairs are not permitted to be conducted by the end user
- Modifications must only be carried out by employees authorized by VEGA company
- Use only approved spare parts
- Components for installation and connection not included in the approval documents are only permitted if these correspond technically to the latest standard mentioned on the cover sheet. They must be suitable for the application conditions and have a separate certificate. The special conditions of the components must be noted and if necessary, the components must be integrated in the type test. This applies also to the components already mentioned in the technical description.
- Vessel installations and probable flow must be taken into account

Cable and wire entries

- The VEGASWING 66 must be connected via suitable cable gland or conduit systems that are in conformity with the requirements of the type of protection and the IP protection and provided with a separate type approval certificate. When connecting VEGASWING 66 to conduit systems, the corresponding sealing facility must be connected directly to the housing.
- The red thread or/dust covers screwed in when the instruments are shipped (depending on the version) must be removed before setup and replaced by cable entries or closing screws suitable for the respective ignition protection type and IP protection.

- Note type and size of the thread: A label with the respective thread name is in the area of the respective thread
- Threads must have no damages
- Cable entries and closing screws should be mounted correctly and according to the safety instructions of the manufacturer to ensure the specified ignition protection type and IP protection rating. When using certified or suitable cable glands, closing screws or plug connections, it is absolutely necessary to note the corresponding certificates/documents. Supplied cable entries or closing screws meet these requirements.
- Unused openings must be closed with plugs suitable for the ignition protection type and IP protection. Supplied plugs meet these requirements.
- Cable or wire entries resp. the closing screws must be tightly screwed into the housing
- The connection cables resp. pipeline sealing facilities must be suitable for the application conditions (e.g. temperature range) of the application
- With surface temperatures > 70 °C, the cables must be suitable for the higher application conditions
- The connection cable of VEGASWING 66 has to be wired fix and in such a way that damages can be excluded.

Mounting

Keep in mind for instrument mounting

- Mechanical damage on the instrument must be avoided
- Mechanical friction must be avoided
- Vessel installations and probable flow must be taken into account
- Process connections separating two areas of different Ex-zones must comply to valid regulations and standards and the protection rating must be in conformity to IEC/EN 60529
- Close the housing lid (s) up to the stop before starting operating, to ensure the IP protection rating specified on the type label
- Protect the lid against unauthorized opening by unscrewing the locking screw up to the stop. With double chamber housing, you have to protect both lids.

Maintenance

To ensure the functionality of the device, periodic visual inspection is recommended for:

- Secure mounting
- No mechanical damages or corrosion
- Worn or otherwise damaged cables
- No loose connections of the line connections, equipotential bonding connections
- Correct and clearly marked cable connections

The parts of the VEGASWING 66 being in contact with flammable media during operation must be included in the periodic overpressure test of the plant.

Intrinsic safety "i"

- Valid regulations for connection of intrinsically safe circuits, e.g. proof of intrinsic safety according to IEC/EN 60079-14 must be observed
- The instrument is only suitable for connection to certified, intrinsically safe instruments
- When connecting a circuit with protection level Ex ib, the device, the sensor meas. system of the device must no more be used in hazardous areas of zone 0.
- When connecting an intrinsically safe instruments with classification mark Ex ia to a circuit with protection level Ex ib, then the classification mark of the instrument changes to Ex ib. After the use as instrument with Ex ib power supply, the instrument must no more be used in circuits with protection level Ex ia
- When connecting an intrinsically safe instrument to a non-intrinsically safe circuit, the instrument must be no longer used in intrinsically safe circuits

- With surface temperatures > 70 °C, the cables must be suitable for the higher application conditions

7 Safe operating mode

General operating conditions

- Do not operate the instrument outside the electrical, thermal and mechanical specifications of the manufacturer
- Use the instrument only in media against which the wetted parts are sufficiently resistant
- Note the relation between process temperature on the sensor/antenna and the permissible ambient temperature on the electronics housing. For permissible temperatures, see the respective temperature tables. See chapter " *Thermal data*".
- If necessary, a suitable overvoltage arrester can be connected in front of the VEGASWING 66
- For assessment and reduction of the explosion risk, valid standards such as for example ISO/EN 1127-1 must be taken into account

8 Instructions for zone 0, zone 0/1 applications

In hazardous areas, the instrument, sensor measuring system in zone 0 should only be operated under atmospheric conditions:

- Temperature: -20 ... +60 °C.
- Pressure: 80 ... 110 kPa (0.8 ... 1.1 bar)
- Air with normal oxygen content, normally 21 %

The operator must ensure that the medium temperature in zone 0 is not higher than 80 % of the self-ignition temperature of the concerned medium (in °C) and does not exceed the max. permissible flange temperature depending on the temperature class. The parts of the sensor which during operation are in contact with flammable products, must be integrated in the periodic overpressure test of the plant.

If no explosive mixtures or additional application conditions are certified resp. supplementary measures such as e.g. according to ISO/EN 1127-1 taken, then the instruments can be also operated according to the manufacturer specification outside atmospheric conditions.

If there is a risk of dangerous potential differences inside zone 0, then suitable measures for circuits in zone 0 must be taken, e.g. according to the requirements of IEC/EN 60079-14.

Process fittings between two explosion protection areas require category 1G (EPL Ga) and less endangered areas must show a tightness in accordance with protection rating IP67 acc. to IEC/EN 60529.

9 Potential equalization/Grounding

- Integrate the instruments into the local potential equalisation, e.g. via the internal or external earth terminal
- The potential equalization terminal must be secured against loosening and twisting
- If grounding of the cable screening is necessary, this must be carried out acc. to the valid standards and regulations, e.g. acc. to IEC/EN 60079-14
- The intrinsically safe input and the intrinsically safe output circuits are ground-free. The voltage resistance against ground is min. 500 Veff.

10 Electrostatic charging (ESD)

In case of instrument versions with electrostatically chargeable plastic parts, the danger of electrostatic charging and discharging must be taken into account!

The following parts can charge and discharge:

- Lacquered housing version or alternative special lacquering
- Plastic housing, plastic housing parts
- Metal housing with inspection window
- Plastic process fittings
- Plastic-coated process fittings and/or plastic-coated sensors
- Connection cable for separate versions
- Type label
- Isolated metallic labels (measuring point identification plate)

Take note in case of danger of electrostatic charges:

- Avoid friction on the surfaces
- Do not dry clean the surfaces

The instruments must be mounted/installed in such a way that the following can be ruled out:

- electrostatic charges during operation, maintenance and cleaning.
- process-related electrostatic charges, e.g. by measuring media flowing past

The warning label indicates danger:

WARNING - POTENTIAL ELECTROSTATIC CHARGING HAZARD - SEE INSTRUCTIONS

11 Electrical data

Supply and signal circuit:	
Terminals 1[+], 2[-]	In type of protection intrinsic safety Ex ia IIC/IIB For connection to a certified, intrinsically safe circuit. Maximum values: ● $U_i = 30\text{ V}$ ● $I_i = 131\text{ mA}$ ● $P_i = 983\text{ mW}$ The effective internal capacitance C_i is negligibly small. The effective internal inductance L_i is negligibly small.
The intrinsically safe circuits are electrically separated from parts which can be grounded. The metallic parts of VEGASWING 66 are electrically connected with the earth terminals. For applications requiring instruments of category 1G or 1/2G, the intrinsically safe power supply and signal circuit must be in conformity with protection class ia. For applications requiring instruments of category 1G or 1/2G the VEGASWING 66 is preferably connected to appropriate instruments with electrically isolated intrinsically safe circuits. For applications requiring instruments of category 2G, the intrinsically safe power supply and signal circuit can correspond to protection class ia or ib. For connection to a circuit with protection class ib, the ignition protection type identification is Ex ib IIC T6.	

12 Thermal data

The max. permissible ambient temperatures depending on the temperature class are specified in the following table.

Category 1G (EPL Ga instruments)

Temperature class	Permissible ambient temperature on the electronics	Permissible ambient temperature on the sensor
T6	-20 ... +48 °C	-20 ... +48 °C
T5, T4, T3, T2, T1	-20 ... +60 °C	-20 ... +60 °C

Under explosive atmosphere on the sensor and temperatures according to temperature classes T6 ... T1 only pressures from 0.8 to 1.1 bar are permitted.

The application conditions during operation without explosive mixtures are mentioned in the operating instructions manuals.

Category 1/2G (EPL Ga/Gb instruments)

Temperature class	Permissible ambient temperature on the electronics	Permissible ambient temperature on the sensor
T6	-50 ... +48 °C	-20 ... +60 °C
T5	-50 ... +63 °C	-20 ... +60 °C
T4, T3, T2, T1	-50 ... +70 °C	-20 ... +60 °C

For applications requiring instruments of category 1/2G, the process pressure of the media must be between 0.8 ... 1.1 bar (80 kPa ... 110 kPa).

The sensor is located in zone 0 and the conditions for category 1 devices for the sensor apply (see certificate).

If the sensors of VEGASWING 66 are operated at temperatures higher than those specified in the above table, please make sure through appropriate measures that there is no danger of ignition from the hot surfaces. The max. permissible temperature on the electronics/housing should not exceed the values specified in the above table. The application conditions when operating in the absence of explosive mixtures can be found in the operating instructions.


Category 2G (EPL Gb instruments)

Temperature class	Permissible ambient temperature on the electronics**	Permissible ambient temperature on the sensor**
T6	-50 ... +48 °C	-196 ... +85 °C
T5	-50 ... +63 °C	-196 ... +100 °C
T4	-50 ... +70 °C	-196 ... +135 °C
T3	-50 ... +70 °C	-196 ... +200 °C
T2	-50 ... +70 °C	-196 ... +300 °C
T1	-50 ... +70 °C	-196 ... +450 °C


** The temperature derating for process temperatures from -196 °C to -40 °C and +290 °C to +450 °C must be observed according to the temperature derating below.

If the sensors of VEGASWING 66 are operated at temperatures higher than those specified in the above table, please make sure through appropriate measures that there is no danger of ignition from the hot surfaces. The max. permissible temperature on the electronics/housing should not exceed the values specified in the above table. The application conditions when operating in the absence of explosive mixtures can be found in the operating instructions.

Temperature derating for process temperatures up to +450 °C and -196 °C

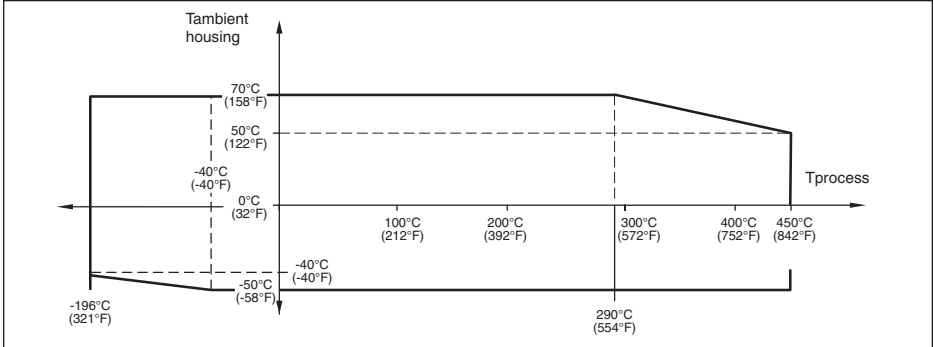



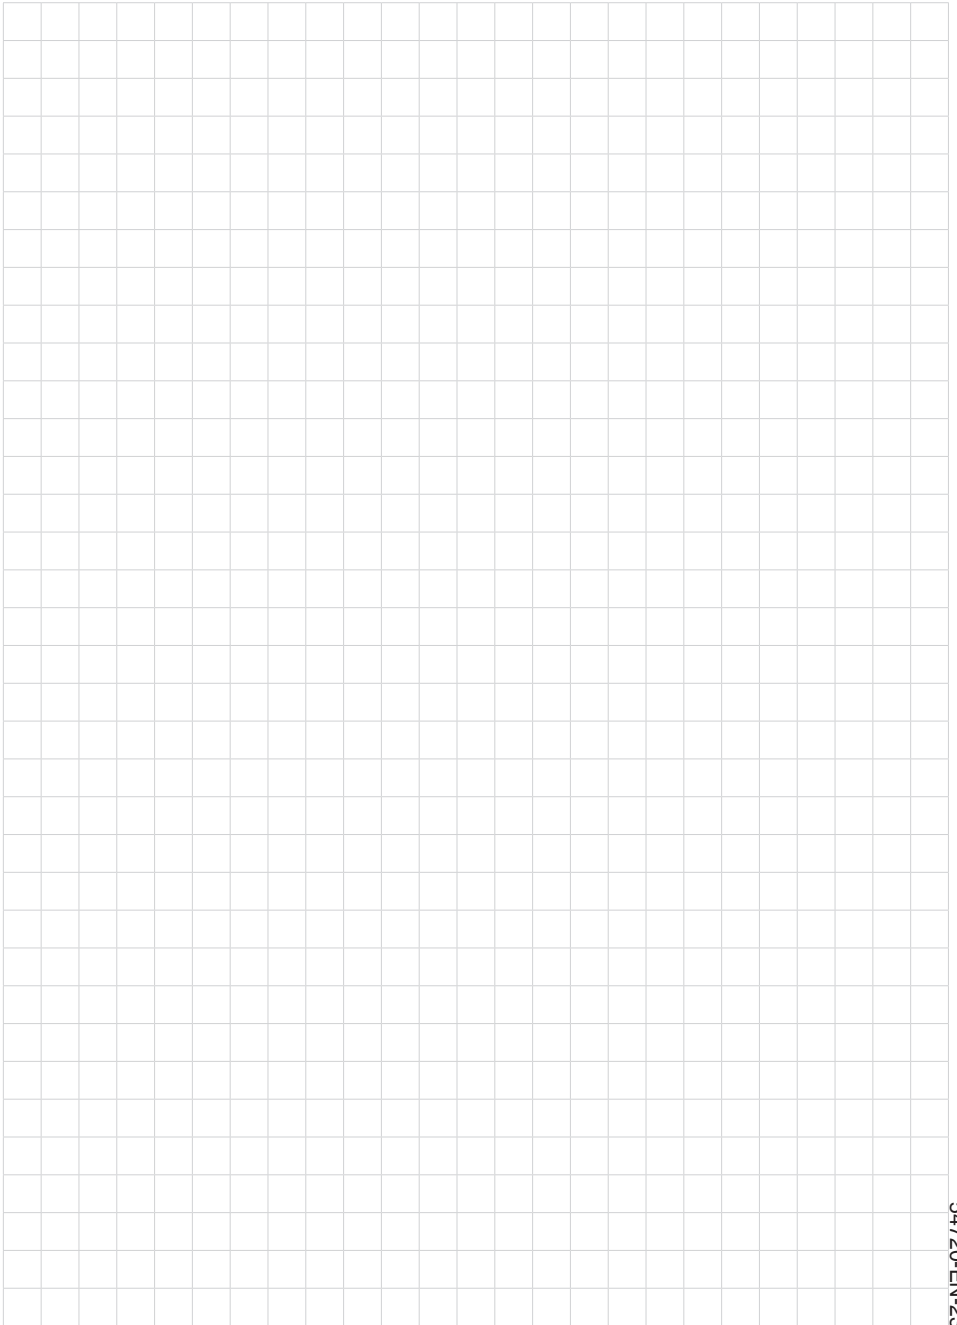



Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2023



54720-EN-230126

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com