

Dust ignitionproof and Protection by Enclosure 4 ... 20 mA/HART - two-wire



Document ID: 57952







Contents

1	Area of applicability	. 3
2	Different ignition protection types	. 3
3	Important specification in the type code	. 3
4	General information	. 5
5	Application area	. 5
6	Specific conditions of use	. 6
7	Important information for mounting and maintenance	. 6
8	Safe operating mode	. 8
9	Potential equalization/Grounding	. 9
10	Electrostatic charging (ESD)	. 9
11	Electrical data	. 9
12	Thermal data	10

Supplementary documentation:

- Operating Instructions VEGAPULS 64
- Quick setup guide VEGAPULS 64
- Certificate of Conformity CSA 15CA70025164 (Document ID: 51033)

Editing status: 2018-05-16



1 Area of applicability

These safety instructions apply to the radar sensors VEGAPULS 64 of type series:

- VEGAPULS PS64(*).CR****H*****(*)(*)
- VEGAPULS PS64(*).VR****H****(*)(*)

with the electronics versions

• H - 4 ... 20 mA/HART - two-wire

According to Certificate of Conformity CSA 15CA70025164 (certificate number on the type label) and for all instruments with safety instruction 57952.

The classification as well as the respective standards are stated in the approval certificate:

- Class II, Division 1, Groups E, F and G, T*°C; Class III
- Ex ta IIIC T* °C Da
- Ex ta/tb IIIC T* °C Da/Db
- Ex ta/tc IIIC T* °C Da/Dc
- Ex tb IIIC T* °C Db
- Zone 20 AEx ta IIIC T* °C Da
- Zone 20/21 AEx ta/tb IIIC T* °C Da/Db
- Zone 20/22 AEx ta/tc IIIC T* °C Da/Dc
- Zone 21 AEx tb IIIC T* °C Db

T* see "Thermal Data"

2 Different ignition protection types

The VEGAPULS PS64.*R can only be used in explosive dust atmospheres.

3 Important specification in the type code

VEGAPULS PS64(*).abcdefghijklm(*)(*)

Position Fea		Feature	Description
a Scope C		С	CSA / Canada
		V	Combination (ATEX, IECEx, FM, CSA)
b	Approval	R	Class II, Division 1, Groups E, F and G, T*°C; Class III
			Ex ta IIIC T*°C Da
			Ex ta/tb IIIC T*°C Da/Db
			Ex ta/tc IIIC T*°C Da/Dc
			Ex tb IIIC T*°C Db
			Zone 20 AEx ta IIIC T*°C Da
			Zone 20/21 AEx ta/tb IIIC T*°C Da/Db
			Zone 20/22 AEx ta/tc IIIC T*°C Da/Dc
			Zone 21 AEx tb IIIC T*°C Db
		В	Plastic horn antenna / without
		D	Plastic horn antenna / with
с	Antenna version / Sec- ond Line of Defense	U	Thread with integrated horn antenna / with
		G	Flange with encapsulated antenna system / with
		I	Hygienic fitting with encapsulated antenna system / with

57952-EN-180806



Position		Feature	Description
de Process fitting / Material **		**	Clamp, DN or ASME industry type flange with pressure ratings and any type which compley with an international or national standard.
		A	PEEK / FKM (SHS FPM 70C3 GLT) / -40 +130 °C
	E		PEEK / FKM (SHS FPM 70C3 GLT) / -40 +200 °C
		G	PEEK / FKM (Kalrez 6375) / -20 +130 °C
	F		PEEK / FKM (Kalrez 6375) / -20 +200 °C
			PEEK / EPDM (A+P 75.5/KW75F) / -40 +130 °C
			PEEK / FFKM (Kalrez 6230) / -15 +130 °C
			PEEK / FFKM (Kalrez 6230) / -15 +200 °C
		т	PTFE / FFKM (Kalrez 6230) / -15 +130 °C
	Matarial / Caal / Drasaaa	U	PTFE / FKM (75,5/VA75F) / -20 +130 °C
f	Material / Seal / Process temperature	V	PTFE / EPDM (75,5/KW75F) / -20 +130 °C
		I	PTFE / PTFE / -40 +130 °C
		J	PTFE / PTFE / -40 +200 °C
		К	PTFE (8 mm) / PTFE / -40 +130 °C
		L	PTFE (8 mm) / PTFE / -40 +200 °C
		Р	PFA (8 mm) / PFA / -40 +130 °C
		Q	PFA (8 mm) / PFA / -40 +200 °C
		С	PP / PP / -40 +80 °C
		D	PP / FKM (SHS FPM 70C3 GLT) / -40 +80 °C
		E	PP / EPDM (COG AP310) / -40 +80 °C
g	Electronics	Н	Two-wire, 4 20 mA/HART, U = 12 35 V DC
h	Supplementary elec- tronics	Х	without
i	Housing	A	Aluminium / IP 66/IP 68 (0.2 bar)
		н	Special colour Aluminium / IP 66/IP 68 (0.2 bar)
		D	Aluminium double chamber / IP 66/IP 68 (0.2 bar)
		S	Special colour Aluminium double chamber / IP 66/IP 68 (0.2 bar)
		V	Stainless steel (precision casting) 316L / IP 66/IP 68 (0.2 bar)
		W	Stainless steel double chamber / IP 66/IP 68 (0.2 bar)
j	Cable entry / Connection	D	M20 x 1.5 / Blind plug
		1	M20 x 1.5 / without
		N	1/2 NPT / Blind plug
		Q	1/2 NPT / without
k	Display and adjustment	х	without
	module PLICSCOM	A	mounted
		F	without; lid with inspection window
		В	Laterally mounted
		к	mounted; with Bluetooth, magnetic pen operation
		L	laterally mounted; with Bluetooth, magnetic pen operation



Position Feature		Feature	Description
I	Additional equipment	Х	without
		V	Purging air connection with reflux valve
			(Antenna version B, D)
		2	with bracket and lid (Canrig)
m	Certificates	Х	No
		М	Yes

4 General information

The radar sensors VEGAPULS PS64 are used to detect the distance between product surface and sensor by means of high frequency electromagnetic waves in the GHz range. The electronics uses the running time of the signals reflected by the product surface to calculate the distance to the product surface.

The VEGAPULS PS64 consist of an electronics housing, a process connection element and a sensor or an antenna.

The display and adjustment module can be mounted optionally.

The VEGAPULS 64 are suitable for use in areas with combustible, dust generating bulk solids.

5 Application area

EPL Da instrument

The electronics housing and the antennas with the mechanical fixing element are installed in explosion-endangered areas of zone 20 requiring EPL Da instruments.

EPL Da/Db or EPL Da/Dc instrument

The electronics housing is installed in hazardous areas of zone 21 or 22 requiring EPL Db or EPL Dc instruments. The process connection element is installed in the separating wall, which separates areas requiring EPL Db, EPL Dc or EPL Da instruments. The antenna system with the mechanical fixing element is installed in hazardous areas of zone 20 requiring EPL Da instruments.

EPL Db instrument

The electronics housing and the antenna system with the mechanical fixing element are installed in explosion-endangered areas of zone 21 requiring instruments of EPL Db.

VEGA Instrument	EPL Dc	EPL Db	EPL Da/Db	EPL Da
Ex Zone 22	Ť			



VEGA Instrument	EPL Dc	EPL Db	EPL Da/Db	EPL Da
Ex Zone 21				
EX		Ť		
Ex Zone 20			+	-
EX				Ť

DIVISION

The VEGAPULS 64 are suitable for applications requiring Division 1 or Division 2 instruments.

6 Specific conditions of use

The following overview is listing the specific conditions of use.

Ambient temperature

You can find the details in chapter "Thermal data" of these safety instructions.

Impact and friction sparks

The VEGAPULS PS64 in light metal versions (e.g. aluminium, titanium, zircon) must be mounted in such a way that sparks from impact and friction between light metals and steel (except stainless steel, if the presence of rust particles can be excluded) cannot occur.

Non-grounded, metallic parts

Resistance between aluminium housing to metal measurement loop labels is > 10⁹ Ohm.

The capacitance of the metal measurement loop label was measured with 15 pF.

See chapter "Electrostatic charging (ESD)" for precaution.

7 Important information for mounting and maintenance

General instructions

The following requirements must be fulfilled for mounting, electrical installation, setup and maintenance of the instrument:

- The staff must be qualified according the respective tasks
- The staff must be trained in explosion protection
- The staff must be familiar with the respectively valid regulations
- Make sure when working on the instrument (mounting, installation, maintenance) that there is no explosive atmosphere present, the supply circuits should be voltage-free, if possible.
- The instrument has to be mounted according to the manufacturer specifications, the Certificate of Conformity and the valid regulations and standards
- Modifications on the instrument can influence the explosion protection and hence the safety
- Modifications must only be carried out by employees authorized by VEGA company


Cable and wire entries

• The red thread or/dust covers screwed in when the instruments are shipped (depending on the version) must be removed before setup and replaced by cable entries, conduit or closing screws suitable for the respective ignition protection type and IP protection.

57952-EN-180806



- Note type and size of the thread: A label with the respective thread name is in the area of the
 respective thread
- Threads must have no damages
- Cable entries and closing screws should be mounted correctly and according to the safety instructions of the manufacturer to ensure the specified ignition protection type and IP protection rating. When using certified or suitable cable glands, closing screws or plug connections, it is absolutely necessary to note the corresponding certificates/documents. Supplied cable entries or closing screws meet these requirements.
- Unused openings must be closed with plugs suitable for the ignition protection type and IP
 protection. Supplied plugs meet these requirements.
- Cable or wire entries resp. the closing screws must be tightly screwed into the housing
- The connection cables resp. conduit sealing facilities must be suitable for the application conditions (e.g. temperature range) of the application
- With surface temperatures > 60 °C, the cables must be suitable for the extended temperature range
- The connection cable of VEGAPULS PS64 has to be wired fix and in such a way that damages can be excluded.

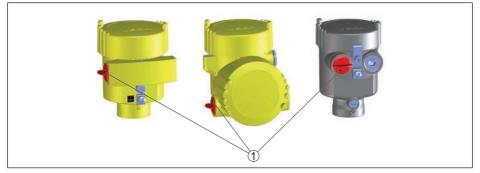

1 Red threaded or dust protection cap



1 Label: Type and size of the thread ½-14 NPT or M20 x 1.5 2 Screw plug





- 1 Label: Type and size of the thread 1/2-14 NPT or M20 x 1.5
- 2 Screw plug

Mounting

Keep in mind for instrument mounting

- Mechanical damage on the instrument must be avoided
- Mechanical friction must be avoided
- Vessel installations and probable flow must be taken into account
- Process connections separating two areas of different Ex-zones must comply to valid regulations and standards
- Close the housing lid (s) up to the stop before starting operating, to ensure the IP protection rating specified on the type label
- Protect the lid against unauthorized opening by unscrewing the locking screw up to the stop. With double chamber housing, you have to protect both lids.
- The instruments must be mounted/installed in such a way that the following can be ruled out:
 - electrostatic charges during operation, maintenance and cleaning.
 - process-related electrostatic charges, e.g. by measuring media flowing past

8 Safe operating mode

General operating conditions

- The 3/8" NPT threaded port of the Dual-Chamber housing shall not be used as a field wiring conduit entry and has to be closed at all times with a suitable plug.
- Do not operate the instrument outside the electrical, thermal and mechanical specifications of the manufacturer
- Use the instrument only in media against which the wetted parts are sufficiently resistant
- Note the relation between process temperature on the sensor/antenna and the permissible ambient temperature on the electronics housing. For permissible temperatures, see the respective temperature tables. See chapter "*Thermal data*".
- If necessary, a suitable overvoltage arrester can be connected in front of the VEGAPULS PS64
- Lids must not be opened if there is a hazardous atmosphere. The housing lids are marked with the warning label:

WARNING -- Do not open when an explosive atmosphere is present

AVERTISSEMENT -- Ne pas ouvrir si une atmosphère explosive peut être présente



9 Potential equalization/Grounding

- Integrate the instruments into the local potential equalisation, e.g. via the internal or external earth terminal
- If grounding of the cable screening is necessary, this must be carried out acc. to the valid standards and regulations

10 Electrostatic charging (ESD)

In case of instrument versions with electrostatically chargeable plastic parts, the danger of electrostatic charging and discharging must be taken into account!

The following parts can charge and discharge:

- Lacquered housing version
- Metal housing with inspection window
- Plastic process fittings
- Plastic-coated process fittings and/or plastic-coated sensors
- Connection cable for separate versions
- Type label
- Isolated metallic labels (measurement loop identification label)

Take note in case of danger of electrostatic charges:

- Avoid friction on the surfaces
- Do not dry clean the surfaces

The instruments must be mounted/installed in such a way that the following can be ruled out:

- electrostatic charges during operation, maintenance and cleaning.
- process-related electrostatic charges, e.g. by measuring media flowing past

The warning label indicates danger:

WARNING -- Potential electrostatic charging hazard -- See instructions AVERTISSEMENT -- Danger potentiel de

charges électrostatiques -- Voir instructions

11 Electrical data

VEGAPULS PS64 used in explosive dust atmospheres

VEGAPULS PS64(*).*R****H*****(*)(*) installed in Zone 20

To be supplied by a Class 2 or Limited Energy Source in accordance wit Edition.	h CSA 61010-1-12 or ISA 61010-1, Third
Supply and signal circuit:	U = 12 35 V DC
VEGAPULS PS64(*).*R****H******(*)(*)	P _{max} < 2 W
Terminal 1[+], 2[-] in electronics compartment of the single chamber housing	
or	
Terminal 1[+], 2[-] in terminal compartment of the double chamber housing	
The max. power of the voltage supply of VEGAPULS PS64(*).*R****H*** ceed 2 W.	****(*)(*) installed in Zone 20 must not ex-



VEGAPULS PS64(*).*R****H*****(*)(*) installed in Zone 20/21, 20/22, 21

To be supplied by a Class 2 or Limited Energy Source in accordance with CSA 61010-1-12 or ISA 61010-1, Third Edition.		
Supply and signal circuit: VEGAPULS PS64(*).*R****H*****(*)(*)	U = 12 35 V DC	
Terminal 1[+], 2[-] in electronics compartment of the single chamber housing		
or		
Terminal 1[+], 2[-] in terminal compartment of the double chamber housing		

Display and adjustment circuit

VEGAPULS PS64(*).*R****H*****(*)(*) Terminals 5, 6, 7 in electronics compartment of the single chamber housing	Only for connection to the associated display unit VEGADIS 61/81.
or	
Terminals 5, 6, 7 in terminal compartment of the double chamber housing	
VEGAPULS PS64(*).*R****H******(*)(*)	For connection to the display and ad-
Indication and adjustment circuit: (spring contacts)	justment module PLICSCOM.

12 Thermal data

Permissible ambient temperature on the electronics housing: -40 ... +60 °C



Permissible process temperature on the antenna/sensor

VEGAPULS	X:	А	PEEK / FKM (SHS FPM 70C3 GLT) / -40 +130 °C
PS64(*).*R***X*****(*)(*)		В	PEEK / FKM (SHS FPM 70C3 GLT) / -40 +200 °C
		G	PEEK / FKM (Kalrez 6375) / -20 +130 °C
		н	PEEK / FKM (Kalrez 6375) / -20 +200 °C
		F	PEEK / EPDM (A+P 75.5/KW75F) / -40 +130 °C
		R	PEEK / FFKM (Kalrez 6230) / -15 +130 °C
		S	PEEK / FFKM (Kalrez 6230) / -15 +200 °C
		Т	PTFE / FFKM (Kalrez 6230) / -15 +130 °C
		U	PTFE / FKM (75,5/VA75F) / -20 +130 °C
		V	PTFE / EPDM (75,5/KW75F) / -20 +130 °C
		1	PTFE / PTFE / -40 +130 °C
		J	PTFE / PTFE / -40 +200 °C
		W	PTFE / PTFE / -196 +200 °C
		К	PTFE (8 mm) / PTFE / -40 +130 °C
		L	PTFE (8 mm) / PTFE / -40 +200 °C
		Υ	PTFE (8 mm) / PTFE / -196 +200 °C
		Р	PFA (8 mm) / PFA / -40 +130 °C
		Q	PFA (8 mm) / PFA / -40 +200 °C
		С	PP / PP / -40 +80 °C
		D	PP / FKM (SHS FPM 70C3 GLT) / -40 +80 °C
		Е	PP / EPDM (COG AP310) / -40 +80 °C
L			

Max. surface temperature on the electronic housing

Installation in Zone 20:

VEGAPULS	Surface temperature electronic housing	
PS64(*).*R****H*****(*)(*), P _{max} < 2 W	Ambient temperature +86 K	

Installation in Zone 20/21, 20/22, 21, Division 1 or Division 2:

VEGAPULS	Surface temperature electronic housing	
PS64(*).*R****H*****(*)(*)	Ambient temperature +36 K	

Max. surface temperature on the sensor/antenna: Process temperature +2 K

The max. surface temperature of the instrument with which the hazardous dust atmosphere can come into contact, **is the higher** of the two specified surface temperatures on the electronics housing or the sensor/antenna.

Printing date:



All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing. Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2018

VEGA Grieshaber KG Am Hohenstein 113 77761 Schiltach Germany Phone +49 7836 50-0 Fax +49 7836 50-201 E-mail: info.de@vega.com www.vega.com