

Safety instructions

ÜSB62-36G.C_* and ÜSB62-30W.C_*

IECEX TUN 07.0002

Ex [ia Ga] IIC T6 Gb

Ex ia IIC T6 Gb



Document ID: 39878



VEGA

Content

| | | |
|----------|---|----------|
| 1 | Area of applicability | 3 |
| 2 | General | 3 |
| 3 | Electrical data | 3 |
| 4 | Application conditions | 4 |
| 5 | Protection | 4 |
| 6 | Installation | 4 |
| 7 | Grounding | 4 |
| 8 | Insulation voltage to earth | 5 |
| 9 | Electrostatic charging (ESD) | 5 |

Supplementary documentation:

- Operating instructions Overvoltage arrester
- Certificate of Conformity IECEX TUN 07.0002 (Document ID: 39879)

Editing status: 2022-03-30

1 Area of applicability

These safety instructions apply to the overvoltage arresters B62-36G, B62-30W of type series ÜSB62-36G.C_*, ÜSB62-30W.C_* according to the IECEx certificate IECEx TUN 07.0002 (certification number on the type label) and for all instruments with the number of the safety instruction (39878) on the type label.

2 General

The overvoltage arresters B62-36G, B62-30W of type series ÜSB62-36G.C_*, ÜSB62-30W.C_* are used for overvoltage protection of intrinsically safe EPL-Ga circuits, circuits in protection class ia or for overvoltage protection of intrinsically safe circuits in protection class ia/ib.

The overvoltage arresters B62-36G, B62-30W for intrinsically safe circuits in protection classification ia meet the requirements for overvoltage arresters according to IEC 60079-14, sect. 12.3, as suitable protection against the danger of ignition caused by lightning.

The overvoltage arresters B62-36G, B62-30W are intrinsically safe electrical devices for installation in hazardous areas with combustible gases, mist or vapours or for installation outside of hazardous areas.

The overvoltage arresters B62-36G, B62-30W are intrinsically safe electrical devices for installation in hazardous areas of EPL-Gb of all combustible materials of explosion group IIA, IIB and IIC.

The overvoltage arrester B62-36G is suitable to protect signal circuits of two-wire-loop powered sensors. The overvoltage arrester B62-30W is suitable for protection of electrical BUS signals according to the Fieldbus system Profibus PA or Foundation Fieldbus.

If the overvoltage arresters B62-36G, B62-30W are used for protection of intrinsically safe signal circuits, the general Ex mounting instructions for explosion protection IEC 60079-14 as well as these safety instructions and the operating instructions must be observed.

The installation of explosion-endangered systems must always be carried out by qualified personnel.

3 Electrical data

The protection class of the overvoltage arresters B62-36G, B62-30W corresponds to the respective protection class of the connected intrinsically safe signal circuit. When connecting an intrinsically safe EPL-Ga signal circuit with protection class ia, the protection class of the signal circuit also corresponds to the protection class ia as EPL-Ga signal circuit. When connecting an intrinsically safe signal circuit with protection class ia or ib, the protection class of the signal circuit also corresponds to protection class ia or ib.

Overvoltage arrester B62-36G

Signal circuit: (Input terminals E1, E2, output terminals A1, A2)

In ignition protection type intrinsic safety Ex ia IIC/IIB or Ex ib IIC/IIB

For connection to an intrinsically safe circuit.

Maximum values:

- $U_i = 36 \text{ V}$
- $I_i = 450 \text{ mA}$
- $C_i = 2,5 \text{ nF}$
- $L_i = 0,15 \text{ mH}$

Overvoltage arrester B62-30W

Signal circuit: (Input terminals E1, E2, output terminals A1, A2)

In ignition protection type intrinsic safety Ex ia IIC/IIB or Ex ib IIC/IIB

For connection to an intrinsically safe circuit.

Maximum values:

- $U_i = 36 \text{ V}$
- $I_i = 400 \text{ mA}$
- $C_i = 2,5 \text{ nF}$
- $L_i = \text{negligibly small}$

The insulation voltage of the intrinsically safe signal circuit to parts which can be grounded, is $> 500 \text{ V AC}$. Thus, the intrinsically safe signal circuit is classified as ungrounded.

The supply voltage U_i of the overvoltage arrester $\ddot{U}SB62-36G.C_*$, $\ddot{U}SB62-30W.C_*$ must not exceed 30 V DC so that the intrinsic safety is still ensured after assembly with a VEGA sensor (VEGAPULS, VEGABAR, VEGAFLEX, VEGADIF 85) or with the VEGA display (VEGADIS 82).

4 Application conditions

Permissible ambient temperatures in dependence of temperature class

Overvoltage arrester B62-36G

| Temperature class | T6 | T5, T4, T3, T2, T1 |
|---------------------------------|--|--|
| Permissible ambient temperature | $-40 \dots +60 \text{ }^\circ\text{C}$ | $-40 \dots +80 \text{ }^\circ\text{C}$ |

Overvoltage arrester B62-30W

| Temperature class | T6 | T5, T4, T3, T2, T1 |
|---------------------------------|--|--|
| Permissible ambient temperature | $-40 \dots +53 \text{ }^\circ\text{C}$ | $-40 \dots +80 \text{ }^\circ\text{C}$ |

5 Protection

Protection class: IP 30

If the overvoltage arresters B62-36G, B62-30W are mounted in the metal or plastic housing, at least protection class IP54 according to EN 60529 is met.

6 Installation

The overvoltage arresters B62-36G, B62-30W are suitable for mounting in hazardous areas of EPL-Gb or for mounting outside of hazardous areas.

Please make sure that the overvoltage arresters B62-36G, B62-30W are only installed in areas allowing protection class IP30 or mounted in a housing with protection class IP54.

When connection an intrinsically safe instrument to a non-intrinsically safe circuit, the instrument must be no longer used in intrinsically safe circuits.

7 Grounding

The potential equalisation of the overvoltage arresters B62-36G, B62-30W must be connected with the potential equalisation in the Ex area.

8 Insulation voltage to earth

The intrinsically safe circuits of the overvoltage arresters B62-36G, B62-30W are galvanically isolated from the potential equalisation with ≥ 500 V AC.

9 Electrostatic charging (ESD)

In case of instrument versions with electrostatically chargeable plastic parts, the danger of electrostatic charging and discharging must be taken into account!

The following parts can charge and discharge:

- Lacquered housing version or alternative special lacquering
- Plastic housing, plastic housing parts
- Metal housing with inspection window
- Plastic process fittings
- Plastic-coated process fittings and/or plastic-coated sensors
- Connection cable for separate versions
- Type label
- Isolated metallic labels (measuring point identification plate)

Take note in case of danger of electrostatic charges:


- Avoid friction on the surfaces
- Do not dry clean the surfaces


The instruments must be mounted/installed in such a way that the following can be ruled out:

- electrostatic charges during operation, maintenance and cleaning.
- process-related electrostatic charges, e.g. by measuring media flowing past

The warning label indicates danger:

WARNING - POTENTIAL ELECTROSTATIC
CHARGING HAZARD - SEE INSTRUCTIONS

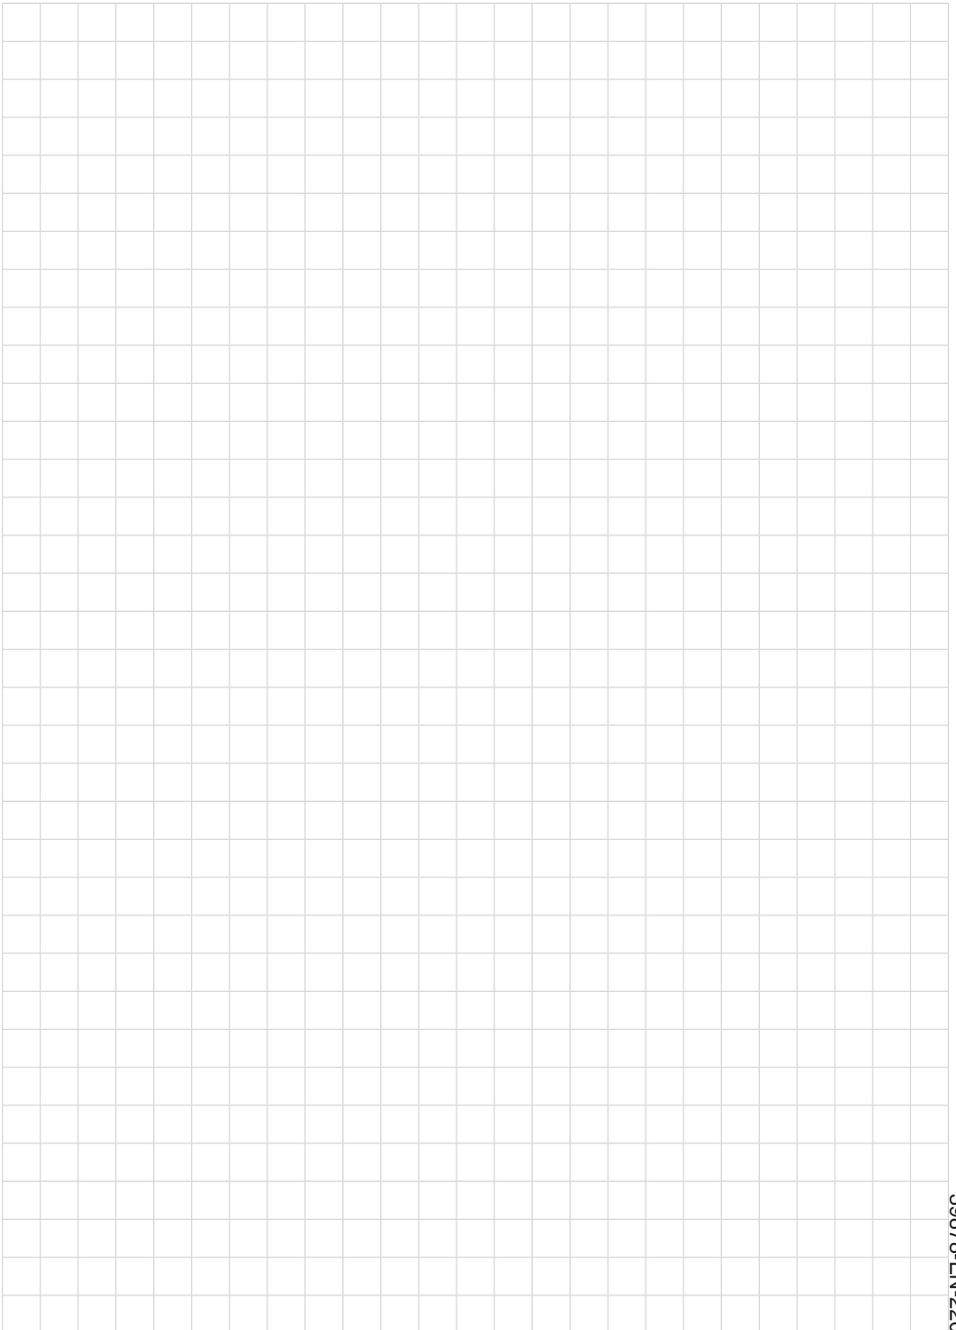

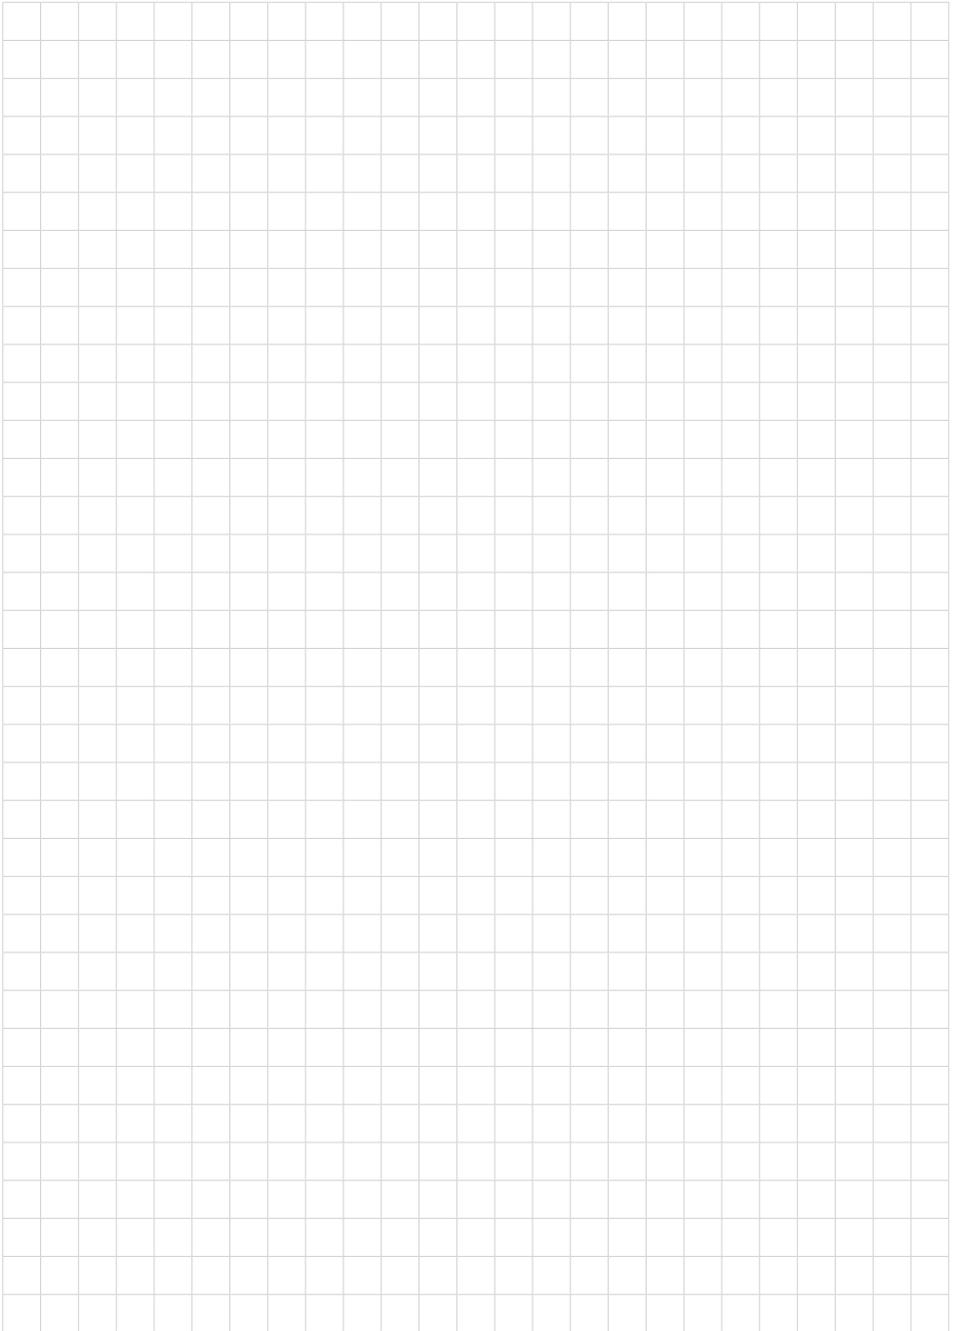

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2022

39878-EN-220331

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
E-mail: info.de@vega.com
www.vega.com