# **VEGA**

# **VEGADIS 82**

# 4 ... 20 mA

# External display and adjustment unit



# **Application area**

VEGADIS 82 is suitable for measured value indication of 4 ... 20 mA sensors. The instrument is looped directly into the signal line at any location.

The VEGADIS 82 can also be used as an external indicating device for a four-wire sensor or a VEGAMET signal conditioning instrument with active 4 ... 20 mA output.

#### Your benefit

- Time and cost saving with the parameter adjustment on site with PLICSCOM
- Reliable and easy adjustment through clear text indication with graphic support

#### **Function**

The VEGADIS 82 measures the current in the current loops and displays the measured value via the integrated display and adjustment module.

The housing of VEGADIS 82 contains a filter element for ventilation. Hence the insturment is also used for atmospheric pressure compensation of a connected submersible pressure transmitter.

### **Technical data**

#### General data

Materials

Housing plastic PBT, Alu die-casting, 316L
Inspection window in Polycarbonate (UL-746-C listed)

housing lid for display and adjustment module

Ground terminal 316Ti/316L

Weight approx. 0.35 kg (0.772 lbs)

# Signal and supply circuit

Voltage loss (4 ... 20 mA)

Without lighting max. 1.7 VWith lighting max. 3.2 VCurrent range 3.5 ... 22.5 mA

#### Display and adjustment module

Indication LC display in dot matrix

Adjustment elements 4 keys

Protection rating

unassembled IP 20mounted into VEGADIS IP 4082 without cover

Materials

- Housing ABS

- Inspection window Polyester foil

**Ambient conditions** 

Storage and transport -40 ... +80 °C (-40 ... +176 °F)

temperature

Ambient temperature -20 ... +70 °C (-4 ... +158 °F)

# Electromechanical data

Options of the cable entry

- Cable gland M20 x 1.5 (cable: ø 5 ... 9 mm)

- Cable entry 1/2 NPT

Wire cross-section (spring-loaded terminals)

- Massive wire, stranded 0.2 ... 2.5 mm² (AWG 24 ... 14)

wire

- Stranded wire with end 0.2 ... 1.5 mm² (AWG 24 ... 16)

sleeve

# **Electrical protective measures**

Protection rating

- Plastic housing IP 66/IP 67, NEMA Type 4X

- Housing for panel IP 40, NEMA Type 1

mounting (mounted)

Aluminium/Stainless
IP 66/IP 68 (0.2 bar), NEMA Type 6P

steel housing

# **Approvals**

You can find detailed information on the existing approvals in the "configurator" on our homepage at <a href="www.vega.com/configurator">www.vega.com/configurator</a>.




# Adjustment

The operation of the sensor is carried out via the optionally used display and adjustment module PLICSCOM. Another adjustment possibility is via a PC with the adjustment software PACTware and respective DTM. The PC is connected to the VEGADIS 82 via the interface adapter VEGACONNECT.



Display and adjustment module PLICSCOM

## **Electrical connection**

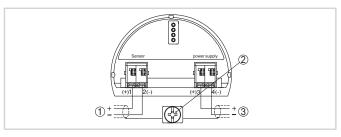


Wiring plan VEGADIS 82 4 ... 20 mA

- 1 To the sensor
- 2 Ground terminal for connection of the cable screen
- 3 For power supply


You can find details on electrical connection in the instrument operating instructions at <a href="https://www.vega.com/downloads">www.vega.com/downloads</a>.

# Specification sheet

## **Dimensions**

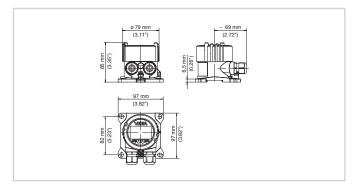

VEGADIS 82 with plastic housing

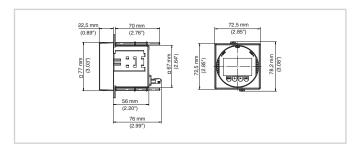

VEGADIS 82 with plastic housing for panel mounting

## Information

You can find further information on the VEGA product line on our homepage <u>www.vega.com</u>.

In the download section under <a href="www.vega.com">www.vega.com</a> you'll find free operating instructions, product information, brochures, approval documents, instrument drawings and much, much more.

#### Contact

You can find the VEGA agency serving your area on our homepage www.vega.com.